



USER MANUAL – EN

IN 23730 Heated vest inSPORTline WARMelong

IN 23737 Heated vest inSPORTline WARMher

IN 23744 Heated vest inSPORTline WARMhim

IN 23749 Heated vest W-TEC HEATstem

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.


SAFETY INSTRUCTIONS

- Read the manual before first use and keep the manual for future references.
- Use only according to manual.
- Do not modify or repair the product yourself.
- Ask your physician before use.
- Do not use damaged or wear product.
- Do not throw the battery to open fire or keep near open fire. Keep the battery away from heat sources.
- In the event of nausea, discomfort or skin reactions such as burning, stop using the product immediately.
- If the temperature of the power bank or vest is too high, stop using the power bank / vest immediately.
- Never use the product while sleeping or in a state of reduced sensitivity.

- People with health complications or reduced thermal sensitivity (paralysis, nausea, etc.) must not use the product.
- The product is not intended for people with acute injuries, suffering from bleeding, hypersensitive skin or swelling.
- Protect the power bank and vest from mechanical damage.
- Keep the power bank away from water. Vest is not waterproof.
- Do not dispose of the power bank with mixed waste.
- Do not manipulate the vest with wet hands.
- Do not open or repair the power bank.
- The vest is supplied without power bank, for heating function you need to buy a power bank.
- We do not recommend using it if the ambient temperature is higher than 30 °C.
- Do not pull on the power cord. Protect the cable from mechanical damage.
- Only charge the product under supervision.

FUNCTION

- The heating parts consists of carbon fibers, using infrared radiation.
- The heaters are located on the front and back of the vest, there are a total of 5 heaters.

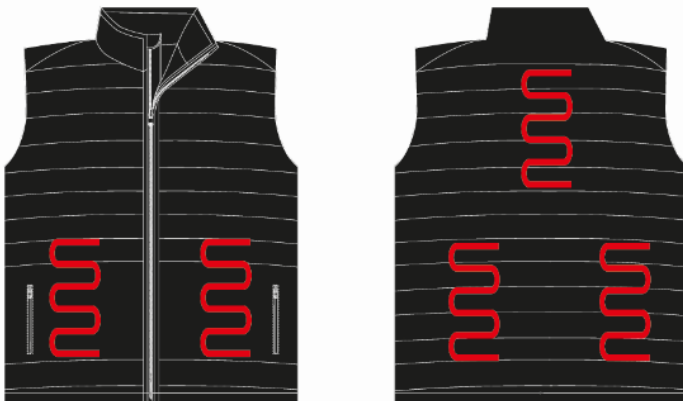

USE

There is a USB cable in the left inner pocket. Connect the cable to the power bank and then place it back in the left inner pocket. Make sure the power bank is fully charged before use.

To start, hold down the button on the front for 3-5 seconds. Press the button to change the temperature, different temperatures are distinguished by colors: red ~55 ° C, white ~50 ° C, blue ~45 ° C.

Press and hold the button again to turn off the vest.

CLEANING AND MAINTENANCE

Remove the power bank before cleaning.

Heated clothing is not machine washable. The heating parts are resistant to moisture. However, strong cleaning agents could damage it. Therefore, it is recommended to clean only with a cloth or brush with only a small amount of cleaning product and pressure. Cleaning must be gentle.

If more thorough cleaning is required, insulate the power cord. Never wash with the battery connected. The product must never be cleaned while the battery is connected.

If the product is damaged, turn it off immediately and disconnect the power bank.

If you are storing the vest for a long periods od time, please turn off the power bank.



Do not dry clean



Hand wash



Do not bleach



Do not iron



Do not tumble dry

SPECIFICATIONS

Material - external	100% polyester
Material - lining	100% polyester
Heating	45 / 50 / 55 °C
	45 °C – 7 hours
Working hours:	50 °C – 4,8 hours
	55 °C – 3,3 hours
Recommended power bank:	
Dimensions:	99 x 63 x 24 mm
Capacity:	10 000 mAh and higher
Input:	5 V
Output	2 A
Operating temperature:	-10°C up to 40 °C

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.



TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance

- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c,
Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov,
749 01
Warranty & Service: Čermenská 486, Vítkov
749 01
CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.c
z
servis@insportline.cz
Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center:
Električná 6471, Trenčín 911 01, SK
CRN: 46259317
VAT ID: SK2023299729
Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.
sk
reklamacie@insportline.s
k
servis@insportline.sk
Web: www.inSPORTline.sk

About shipping

