



USER MANUAL – EN

**IN 27326 Electric four-wheeled wheelchair inSPORTline
Antun**



CONTENTS

- SAFETY INSTRUCTIONS..... 3
- ASSEMBLY 4
- PRODUCT DESCRIPTION 5
- CONTROLS DESCRIPTION 6
- CONTROLS..... 6
- GEARBOX OIL CHANGE..... 10
- BATTERY CHARGING..... 10
- STORAGE AND MAINTENANCE 10
- BEFORE USE..... 11
- BATTERY 11
- SPECIFICATIONS..... 12
- TROUBLESHOOTING 12
- ENVIRONMENT PROTECTION 13
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 13
- SERVICE BOOKLET 15

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- Familiarize yourself with local regulations and laws before driving. Age limit and usage may vary from state to state. It is the user's responsibility to familiarize themselves with the laws first.
- Do not modify or repair the product.
- Do not use the scooter if sharp edges appear on the scooter.
- Never drive under the influence of alcohol, pills or drugs.
- Before driving, check that the brakes and lights work properly.
- Check tire pressure regularly.
- Any new user must be familiarized with driving and using of the scooter.
- Never modify the structure or engine to increase performance, any modification will void the warranty.
- Before driving, adjust your mirrors so that you can see behind you.
- Always give your full attention to driving.
- Do not use a mobile phone or headphones while driving.
- Check the battery power before driving.
- Brake efficiency is reduced on wet surfaces, always brake slowly and with enough time to stop.
- Sudden braking may result in loss of balance and fall.
- Before driving, adjust the seat to a comfortable position so that you can comfortably control the scooter.
- Drive smoothly, avoid sudden changes in speed.
- Do not park the scooter unprotected in the rain or on direct sunlight.
- Do not stop on a steep hill.
- Drive only on paved terrain.
- Do not charge the scooter unattended.
- Protect against rain and water.
- Never leave the scooter running or with the key in the ignition unattended.
- Keep out of reach of children, if there are children around, prevent unauthorized use.
- If you want to use the scooter in normal road traffic, consult local regulations and laws about its suitability.
- Persons with reduced mobility must always be accompanied by another person.
- Consult your doctor about your medical fitness to drive.
- If the scooter suddenly accelerates or decelerates, or any other abnormality occurs, stop driving immediately.
- The scooter is only intended for one person at a time.
- In reduced visibility, wear a reflective vest or clothing with reflective elements.
- Suitable for people aged 18 and over.

ASSEMBLY

Step 1

Remove all parts from the packaging material. Check that you have removed all parts: keys (ignition, trunk), remote control, charger, mirrors., headrest, trunk.



Step 2

Press the safety on the backrest and slide the headrest.



Step 3

Open the trunk and fix it with 5x bolts and nuts.



Step 4

Screw the mirrors clockwise. If necessary, tighten with a wrench.



Step 5

Open the compartment under the seat, turn the key clockwise. Turn the power switch to the ON position.

On the back of the scooter, between the safety wheels, there is a lever that is attached to the side of the engine. Make sure the lever is pushed down before riding.



PRODUCT DESCRIPTION



1. Mirrors

2. Brake lever

3. LED lights

4. Turn signals

5. Side reflective lights

6. Tubeless tire


7. Headrest

8. Arm rest

9. Trunk

10. Rear light

CONTROLS DESCRIPTION

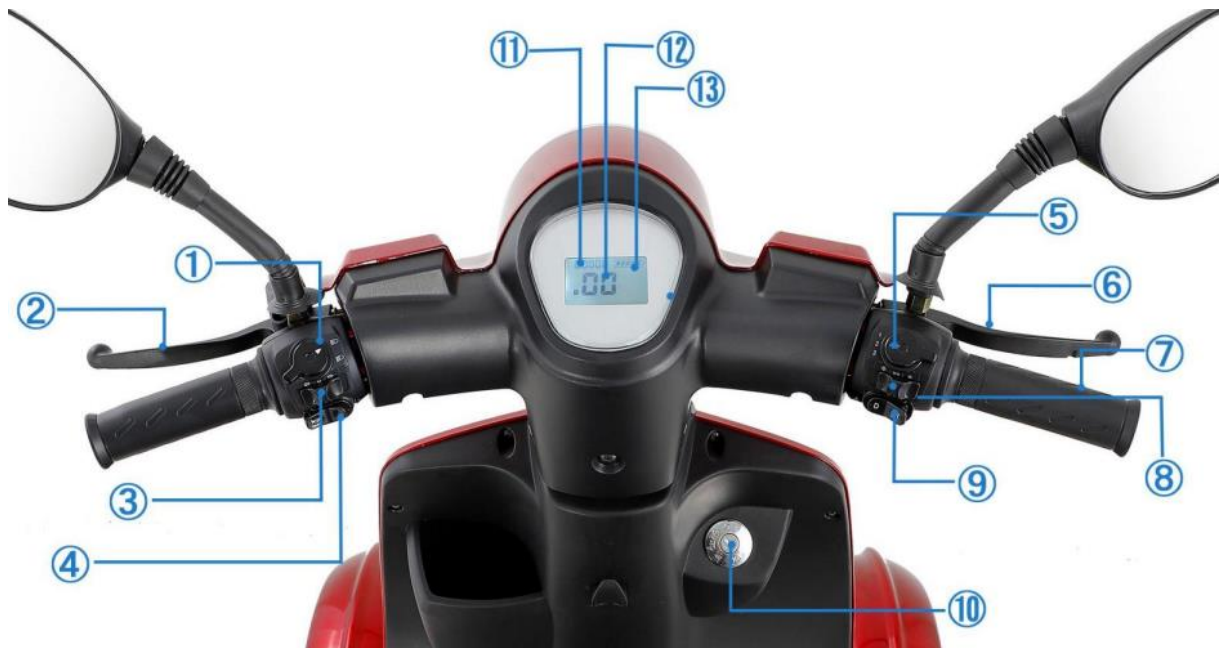



1. High beam / low beam	8. Headlight Switch
2. Rear brake lever	9. Reverse
3. Indicator lights	10. Ignition
4. Horn	11. Mileage
5. Speed Mode	12. Speed display
6. Front brake lever	13. Battery Display
7. Throttle	

CONTROLS

The scooter can be started in 2 ways, manually or by remote control. Once you start the scooter in one way, it must be turned off in the same way.

1. Manually: To start, insert the key into the ignition and turn clockwise.
Turn the key counterclockwise to turn it off.

2. Remote controller: Press twice to turn on 
Press once to turn off .

RIDING

To start, turn the throttle on the right handle. Always control the speed smoothly.


Use both brakes to slow down and stop. Always brake gradually, avoid sudden stops if possible. An electric braking system prevents the engine from running if the brakes are applied.

Be aware that slowing down and riding on wet, wet or slippery roads can increase braking distance. The braking distance is extended even when riding downhill. Always keep your speed under control.

While riding, you can set 3 speed modes with different maximum speeds:

[1] - 6km/h, [2] - 12km/h [3] - 25km/h

ALARM

The alarm responds to unauthorized movement. You start or turn off the alarm by pressing the  button on the remote control.

The remote controller is powered by 1x CR2032 battery.



1. Turning on the alarm

2. Acoustic signal

3. Turning off the alarm

4. Press 2x to start

ADJUSTABLE PARTS

Seat position

Lift the lever to move the seat. After setting the appropriate position, release the lever.



Backrest position

Zvedněte páčku pro úpravu opěrky. Po nastavení vhodné polohy páčku uvolněte.



Armrest position

You can adjust the angle of the armrest using the lever under the armrest.



Parking

Press the brake and then the button on the top of the lever. To release, press the lever again and then the button.



Storage space

The scooter offers several storage spaces (under the seat, a trunk and a compartment by the handlebars)



Crutch holder

The crutch holder can be attached to the frame under the kurver using screws. The crutch holder can be placed on the left or right side, as required.



VIN

The VIN is located under the cover on the frame. To find the number, the plastic cover must be removed.



Brake sensitivity

You can adjust the sensitivity of the brakes using the nut on the brakes, see picture. Using the appropriate tools, you can tighten the nut (clockwise, the brake will be tight) or loosen the nut (counter-clockwise, the brake will be looser)

Always adjust the brake sensitivity the same on both brakes. Always check the functionality and efficiency of the brakes before riding.





GEARBOX OIL CHANGE

Change the oil according to the chart below. Use gear oil 85W-90, 120 – 130 ml.

Place a container under the gearbox. Loosen and unscrew the drain bolt. Then loosen the filling bolt as well. Once the oil has been drained, refit the drain bolt. Pour 120-130 ml of 85W-90 gear oil into the gearbox. Screw in the filling bolt. Before riding, make sure that the transmission does not make abnormal noises or oil leaks.

1. Filling bolt
2. Drain bolt

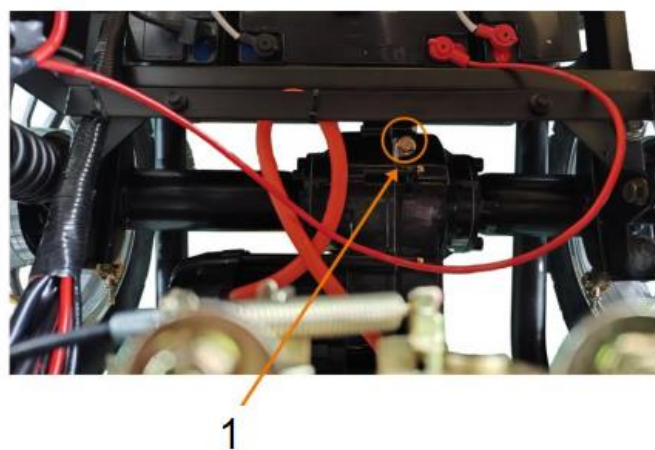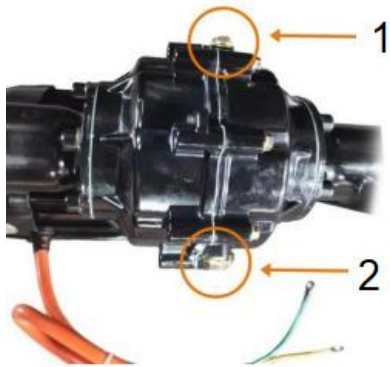

BATTERY CHARGING

The battery must be charged before the first ride. Connect the charger to the battery and then to the mains. The charger indicator lights up red during charging. As soon as the battery is charged, it lights up green. Battery charging time is 8-10 hours. Do not leave the scooter charging unattended. Do not cover or place the charger on flammable, combustible materials or objects that conduct electricity. Charge in a dry, clean and well-ventilated area.

STORAGE AND MAINTENANCE

- Wipe surface dirt with a damp cloth with a small amount of non-aggressive cleaning agent. Then dry the scooter.
- Do not use aggressive cleaning agents and solvents for cleaning.

- Before any maintenance, turn off the main switch of the scooter.
- To protect the battery, after each ride and subsequent storage, turn off the main switch of the scooter.
- If you do not plan to use the scooter for a long time, recharge the scooter regularly (once a month).
- The scooter must be stored in a dry, shady and well-ventilated place.
- Be careful that water does not penetrate the electric parts of the scooter.
- Do not clean the scooter with high-pressure cleaners.
- Change the gear oil using the following table:

First exchange after 1000 km or within 2 years from the date of sale
--

Next change after 4000 km or within 2 years of the 1st oil change

The next oil change follows either after driving 4000 km or within 2 years of the previous oil change

Check the condition of the oil, if necessary, change the oil if the scooter has not been in use for more than 4 months

BEFORE USE

Before driving, check the following:

- Functionality of brakes, lights, movement and clearance of the handlebars, etc.
- Check the correct tire pressure and condition.
- Adjust the seat to the correct position.
- Check the battery charge status.

BATTERY

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

- For proper operation and safe use of the battery, follow the instructions in the manual. Stop using the battery immediately if the battery is damaged, leaks liquid or you smell abnormal odor.
- Battery lifespan is limited. If you use a battery that exceeds normal lifespan, the charging frequency may increase, and the scooter range will be reduced.
- Do not open or throw of the battery in a fire. Do not insert foreign objects into the battery.
- Do not touch the battery with metal objects. The battery may explode or be damaged.
- Use only the original charger.
- Follow local regulations and laws while driving.
- You can charge the battery continuously.
- The ideal battery charging temperature is +10 ° C to +30 ° C.
- If you use the battery for an extended period, its temperature will be higher. This is a normal battery condition.
- If you use the battery in a cold environment, the range is lower.
- Do not repair or modify the battery yourself.

SPECIFICATIONS

Engine:	60V 1000W	Clearance height:	11 cm
Battery:	60V 20 Ah lead-acid	Wheel width:	40 cm
Brakes:	Drum brakes	Seat depth:	45 cm
Wheels:	3.00 – 16" tubeless	Seat width:	45 cm
Max. speed:	25 km/h*	Max. load capacity:	150 kg
Range per charge:	40-50 km*	Net weight:	126 kg
Charging time:	8 – 10 a.m.	Total weight:	148 kg
Dimensions:	165*69*108 cm	Max. pitch:	20°

* Maximum speed and range of the scooter depends on the state of battery charge, load, terrain, weather conditions, etc.

TROUBLESHOOTING

The scooter does not move	The ignition is not on	Turn the key
	Dead battery	Charge the battery
	The battery is not connected	Check the battery connection
	The circuit breaker is not on	Turn the circuit breaker to the ON position
	The drive lever is not engaged	Make sure the lever is on
	Engine error	Check connections and motor condition
	Throttle failure	Check the connection or replace the throttle
	Driver failure	Check the connection or replace the driver
Unusual engine sound	Damaged engine	Replace the motor
The scooter does not slow down after releasing the throttle	The throttle does not work	Replace the throttle
	Driver failure	Replace the controller
The scooter is slowing down	Low battery	Charge the battery
	Damaged battery	Replace the battery
	Damaged throttle	Damaged throttle
Low range per charge	Low tire pressure	Inflate to 40 PSI
	Low battery	Charge the battery
	Damaged battery	Replace the battery
	Overloading of the scooter	Reduce the load
	Bad riding conditions	
Unevenly worn wheels	Low tire pressure	Inflate to 40 PSI
Steering is stiff	Uneven tire pressure	Adjust the tire pressure
	Overloading of the scooter	Reduce the load
The battery is not charging	Bad socket	Check the power supply or use

		another outlet
	Bad external connection	Check the connection
	Bad internal wiring	Check the connection
	Damaged charger	Replace the charger
	Damaged battery	Replace the battery

Do not carry out any repair or service if you do not have sufficient knowledge and experience. Always use professional tools.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.
- Failure to follow service intervals

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082
Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping



SERVICE BOOKLET

Service date	Tasks	Stamp and signature
	Changing the transmission oil <input type="checkbox"/> Inspection of mechanical parts <input type="checkbox"/> Other:	
	Changing the transmission oil <input type="checkbox"/> Inspection of mechanical parts <input type="checkbox"/> Other:	
	Changing the transmission oil <input type="checkbox"/> Inspection of mechanical parts <input type="checkbox"/> Other:	
	Changing the transmission oil <input type="checkbox"/> Inspection of mechanical parts <input type="checkbox"/> Other:	