




USER MANUAL – EN

IN 8719-2 Exercise Bike inSPORTline inCondi UB60i

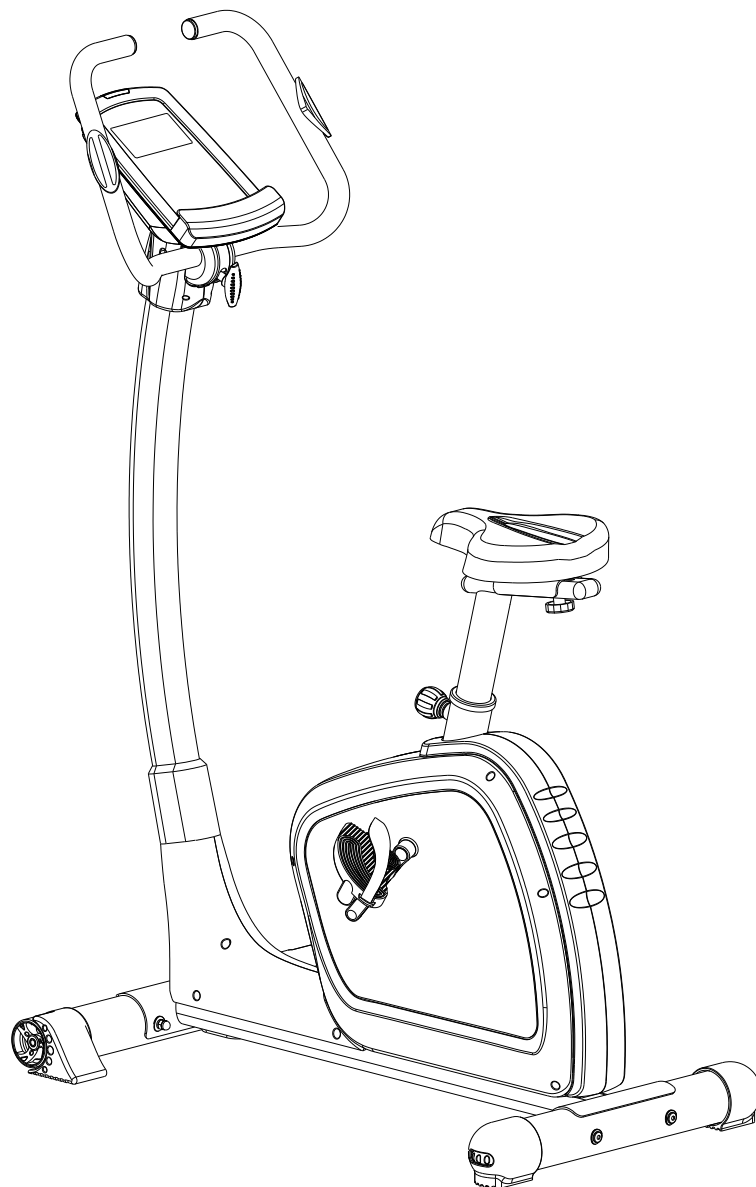

CONTENTS

- SAFETY INSTRUCTIONS..... 3
- DIAGRAM..... 4
- PARTS LIST 5
- CHECK LIST..... 8
- ASSEMBLY INSTRUCTIONS 9
- CONSOLE SM2570-31 14
- iConsole+Training APP 19
- USE 20
- CORRECT BODY POSTURE 20
- MAINTENANCE 20
- STORAGE 21
- IMPORTANT NOTICE 21
- ENVIRONMENT PROTECTION 21
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 21


SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- To ensure the best safety of the exerciser, regularly check it on damages and worn parts.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure that that person is familiar with the content and instructions in these instructions.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your work-out, remove all sharp-edged objects around the exerciser.
- Only use the exercise for your work-out if it works flawlessly.
- Any broken, worn or defective part must immediately be replaced and/or the exerciser must no longer be used until it has been properly maintained and repaired.
- Parents and other supervisory persons should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to children's natural play instinct and interest in experimenting.
- Use a damp cloth to clean the device. Do not use solvents or chemical cleaning agents. In case of any problems, stop using the device and contact our service department.
- The device is designed for use in a dry environment. Extremely cold or damp environments are unsuitable for storage, where corrosion or other damage to the device may occur.
- Do not place sharp objects on the device. No adjustable part must protrude so as not to hinder the user's movement.
- Make sure there is sufficient free space around the exerciser when you set it up. min 0,6 meters.
- To avoid possible accidents, do not allow children to approach the exerciser without supervision, since they may use it in a way for which it is not intended due to their natural play instinct and interest in experimenting.
- Please note that an improper and excessive work-out may be harmful to your health.
- Please note that levers and other adjustment mechanisms are not projecting into the area of movement during the work-out.
- When setting up the exerciser, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Always wear appropriate clothing and shoes which are suitable for your work-out on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the work-out due to their form (for example, length). Be sure to wear appropriate shoes which are suitable for the work-out, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your work-out and sensible eating habits.
- Assemble the exerciser as per assembly instructions and be sure to only use the structural parts provided with the exerciser and designed for it. Prior to the assembly, make sure the contents of the delivery is complete by referring to the parts list of the assembly and operating instructions.

- Be sure to set up the exerciser in a dry and even place and always protect it from humidity. If you wish to protect the place particularly against pressure points, contamination, etc., it is recommended to put a suitable, non-slip mat under the exerciser.
- The general rule is that exercisers and training devices are no toys. Therefore, they must only be used by properly informed or instructed persons.
- Stop your work-out immediately in case of dizziness, nausea, chest pain or any other physical symptoms. In case of doubt, consult your physician immediately.
- Children disabled and handicapped persons should use the exercise only under supervision and in presence of another person who may give support and useful instructions.
- Be sure that your body parts and those of other persons are never close to any moving parts of the exerciser during its use.
- When adjusting the adjustable parts, make sure they are adjusted properly and note the marked, maximum adjusting position, for example of the saddle support, respectively.
- Do not work out immediately after meals.
- The product is not intended for therapeutic uses.
- **Category:** HA (STN EN ISO 20957) for home use.
- **Maximum weight limit:** 150 kg
- **WARNING:** Before beginning any exercise program, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

DIAGRAM

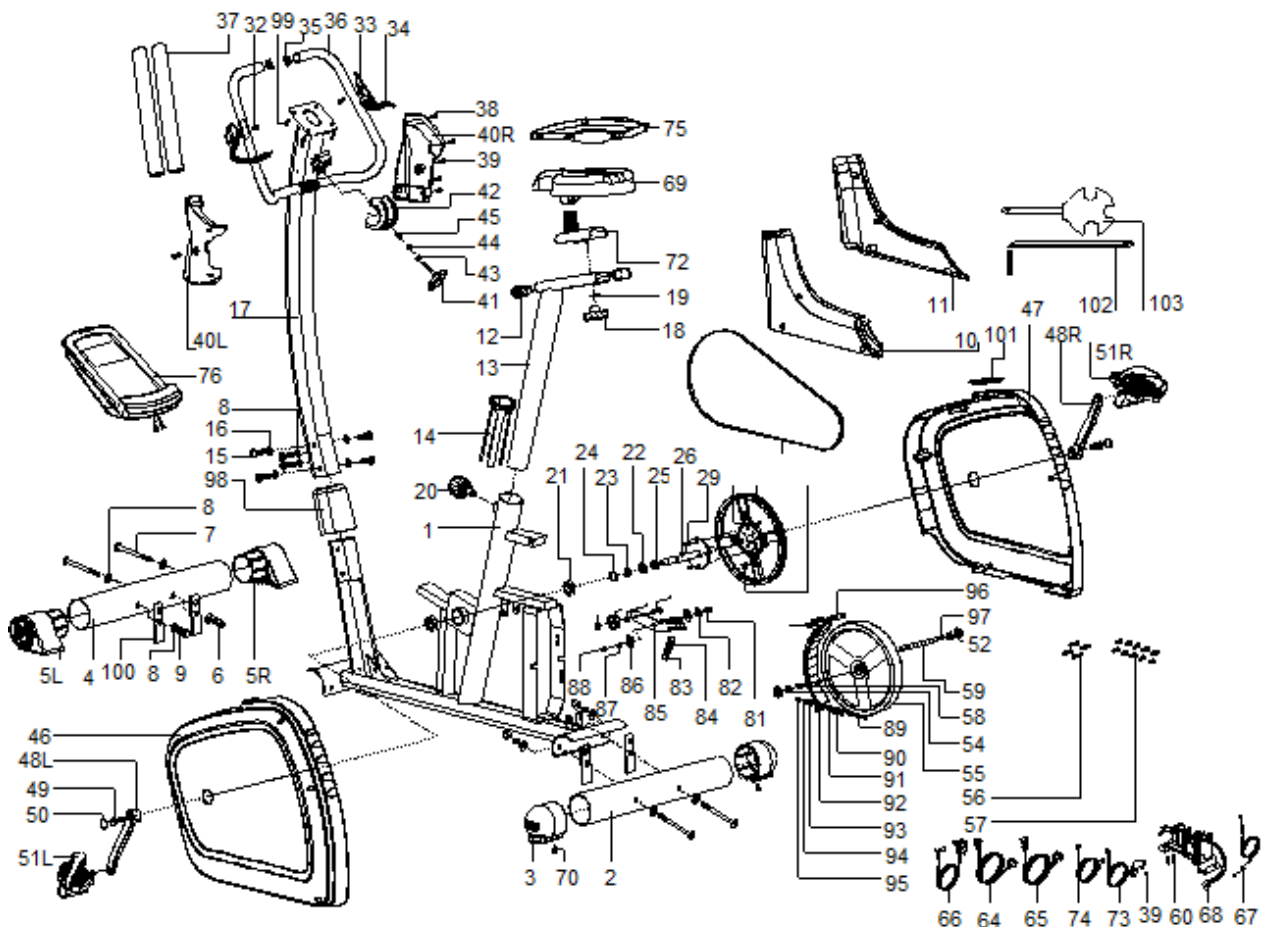



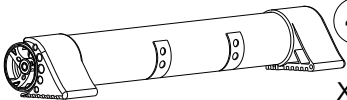

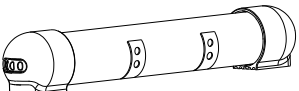






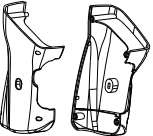
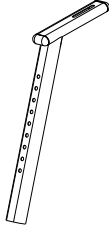
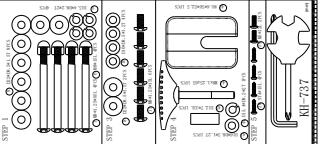
PARTS LIST

Part No.	Description	Qty
1	Main frame	1
2	Rear stabilizer	1
3	Adjustable cap	2
4	Front stabilizer	1
5L	Left moveable cap	1
5R	Right moveable cap	1
6	Domed nutM8*1.25*15L	4
7	Allen bolt M8*1.25*95L	4
8	Curved washer D22xD8.5x1.5T	10
9	Spring washer D15.4xD8.2x2T	4
10	Front decorative cover (left)	1
11	Front decorative cover (right)	1
12	Oval cap	2
13	Seat post	1
14	Inner tube	1
15	Allen bolt M8*1.25*15L	6
16	Flat washer D16*D8.5*1.2T	4
17	Handlebar post	1
18	Club knob	1
19	Flat washer D25xD8.5x2T	1
20	Knob	1
21	Bearing #6003ZZ	2
22	Waved washer D22xD17x0.3T	2
23	Flat washer D23*D17.2*1.5T	1
24	C-clip S-17(1T)	1
25	Spacer D22.5*D17.2*6.4T	1
26	Crank axle	1
27	Belt wheel	1
28	Nylon nut M6x1.0x6T	4
29	Bolt M6x1.0x15L	4
30	Belt	1
31	Round magnet	1
32	Screw ST4*25L	2
33	Handle pulse	2
34	Handle pulse cable	2
35	Mushroom cap	2

36	Handle bar	1
37	Foam	2
38	Screw ST4*1.41*15L	4
39	Bolt M5x0.8x12L	3
40L	Computer bracket (left)	1
40R	Computer bracket (right)	1
41	Knob	1
42	Protective cover	1
43	Flat washer D16xD8.5x1.2T	1
44	Spring washer D15.4xD8.2x2T	1
45	Bushing	1
46	Left chain cover	1
47	Right chain cover	1
48L	Left crank	1
48R	Right crank	1
49	Bolt M8x1.25x25	2
50	Screw cover D23x6.5	2
51L	Left pedal set	1
51R	Right pedal set	1
52	Anti-loosen net 3/8"-26UNF*6.5T	2
54	Nut D9.5x8T(3/8"-26UNFx4T)	2
55	Flywheel	1
56	Pin	4
57	Screw ST4.2x1.4x20L	12
58	C-clip S-10(1T)	1
59	Flywheel axle	1
60	Screw ST4.2*1.4*15L	4
64	Upper computer cable	1
65	Lower computer cable	1
66	Adaptor	1
67	Tension cable	1
68	Motor	1
69	Seat	1
70	Screw ST4x1.41x10.L	2
72	Seat adjustment tube	1
73	Sensor cable	1
74	Electric cable	1
75	Chest belt	1

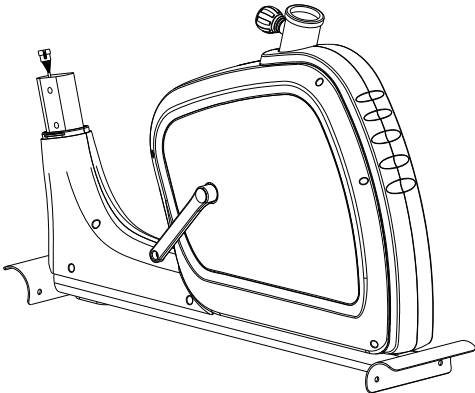
76	Computer	1
77	Allen bolt M10*35L	1
78	Bushing	1
79	Idle wheel	1
80	Nylon nut M10x1.5x10T	1
81	Bolt M8*25	1
82	Flat washer D30*D8.5*2.0T	1
83	Plastic cover	2
84	Spring D2.2*D14*65L	1
85	Fixing plate for idle wheel	1
86	Plastic flat washer	2
87	Nut M8*1.25*6T	1
88	Nylon nut M8*1.25*8T	2
89	Bolt M6*65L	1
90	Spring D1.0*55L	1
91	Nut M6*1*6T	1
92	Fixing plate for magnet	1
93	Nylon washer D6*D19*1.5T	1
94	Flat washerD13*D6.5*1.0T	1
95	Nylon nut M6*1*6T	1
96	Bolt M8*52L	1
97	Fixing ring	1
98	Oval cover	1
99	Bolt M5x0.8x10L	4
100	Buffer	4
101	Round ring for chain cover	1
102	Allen spanner	1
103	Spanner	1

CHECK LIST

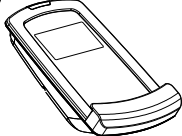 <p>1 x1</p>		 <p>17 x1</p>	
 <p>4 x1</p>	 <p>98 x1</p>		
 <p>2 x1</p>			 <p>51L & 51R x1</p>
 <p>36 x1</p>	 <p>75 x1</p>	 <p>69 x1</p>	
 <p>76 x1</p>	 <p>66 x1</p>	 <p>40L & 40R x1</p>	 <p>13 x1</p>
			

ASSEMBLY INSTRUCTIONS


STEP 1

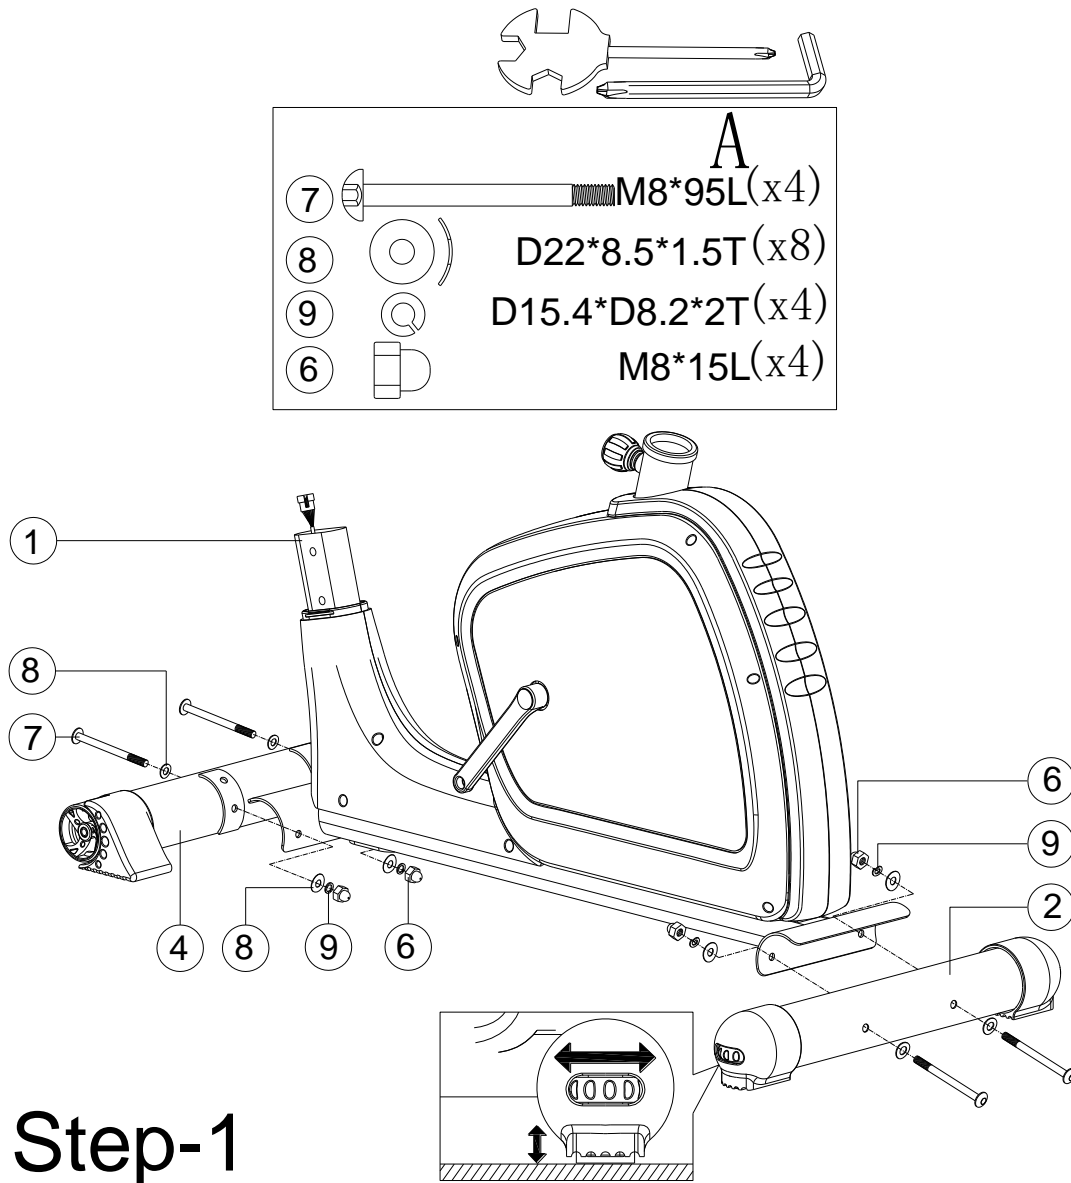

Step-1


Fix the front stabilizer (4) and rear stabilizer (2) onto the main frame (1) by using domed nut (6), allen bolt (7), curved washer (8) and spring washer (9).

STEP 2

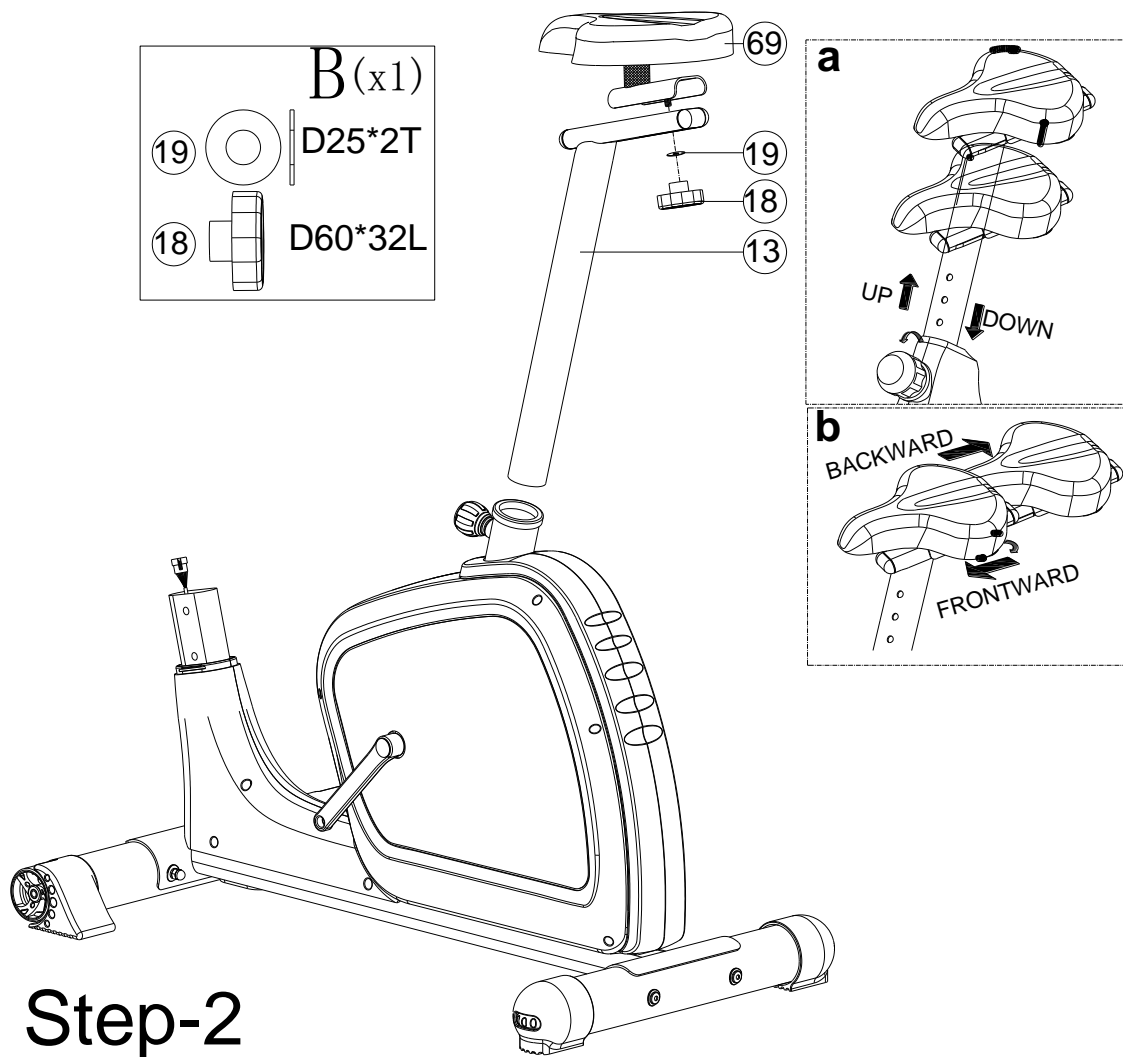


- 1) Assemble the seat (69) onto the seat post (13) by club knob (18) and flat washer (19). You can adjust the seat BACKWARD and FORWARD. See figure b.
- 2) Insert the seat post (13) into the main frame. You can adjust the seat UP and DOWN by knob (20). See figure a.

STEP 3

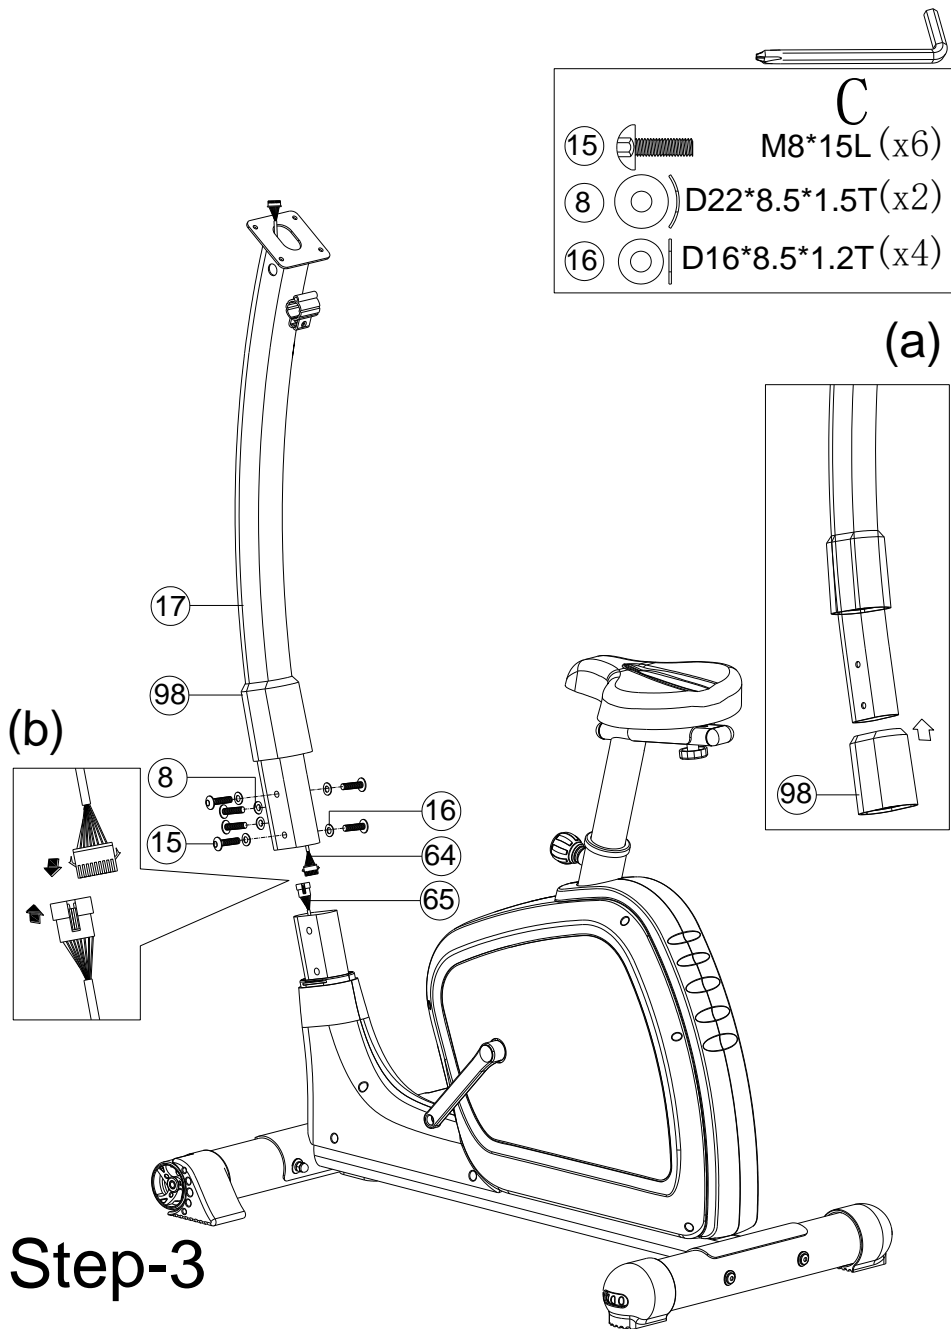

- 1) Lift up the oval cover (98) onto the handlebar post (17) as figure a shown.
- 2) Connect upper computer cable (64) and lower computer cable (65) as figure b shown and then assemble handlebar post (17) with main frame by allen bolt (15), flat washer (16) and curved washer (8).


STEP 4

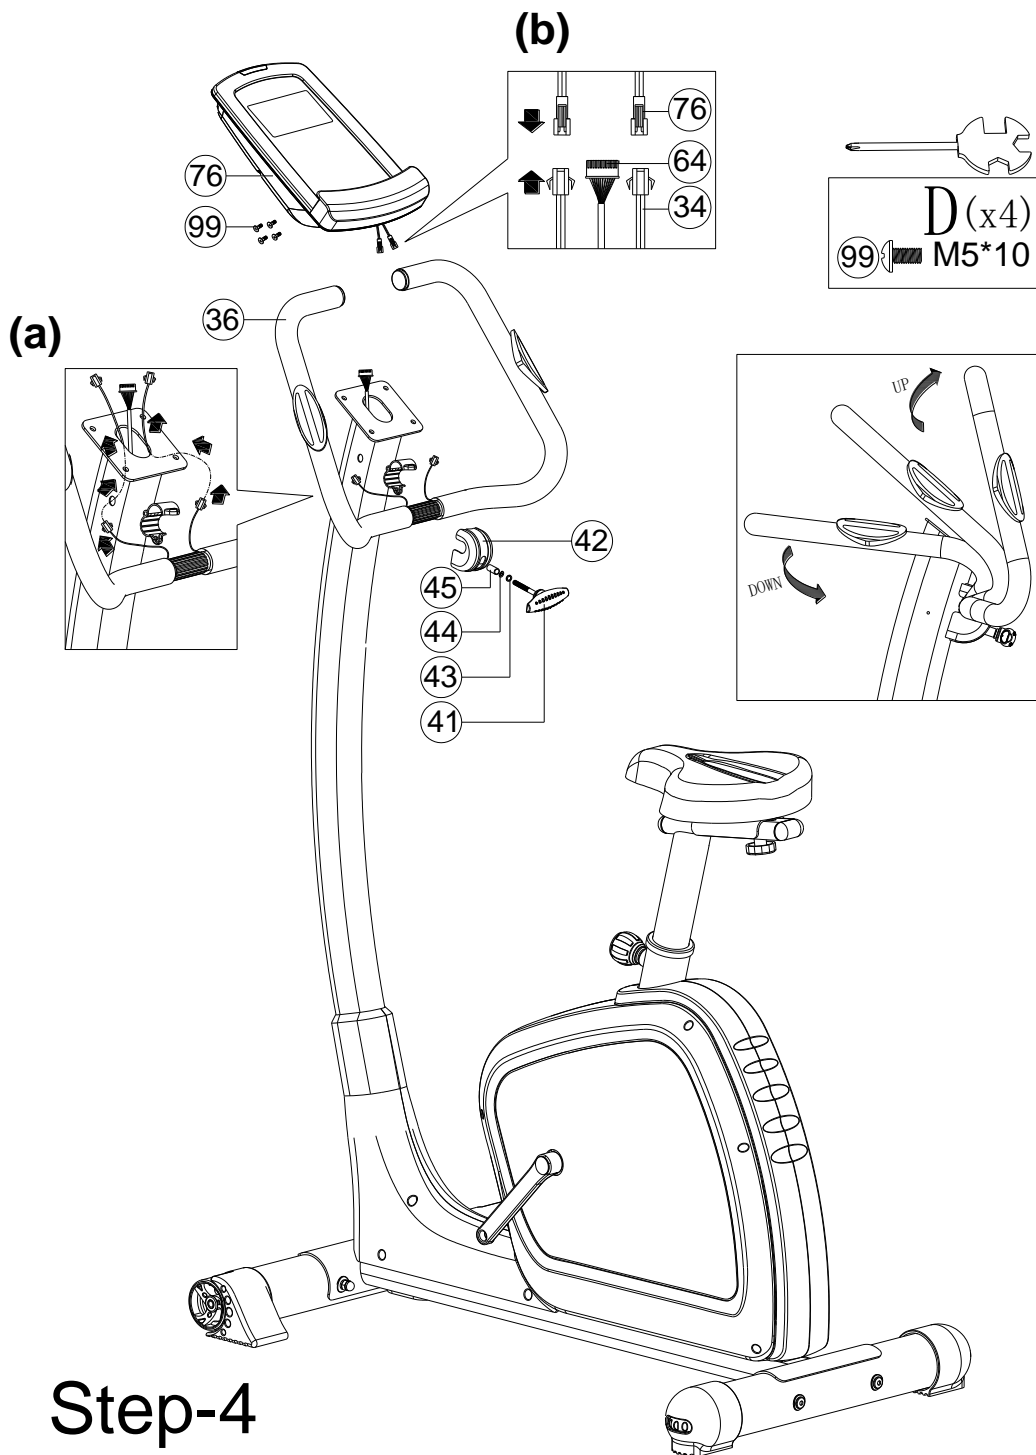

Step-4

- 1) Take the handle pulse cable (34) out of handlebar post through the holes in handlebar post as arrows as figure a shown.
- 2) Connect handle pulse cable (34) and upper computer cable (64) with the cables attached to computer (76). Then assemble computer (76) onto handlebar post by bolt (99) as figure b shown.
- 3) Fix the handlebar (36) onto the handlebar post by knob (41), protective cover (42), flat washer (43), spring washer (44) and bushing (45). You can adjust the angle of handlebar by knob (41).

STEP 5

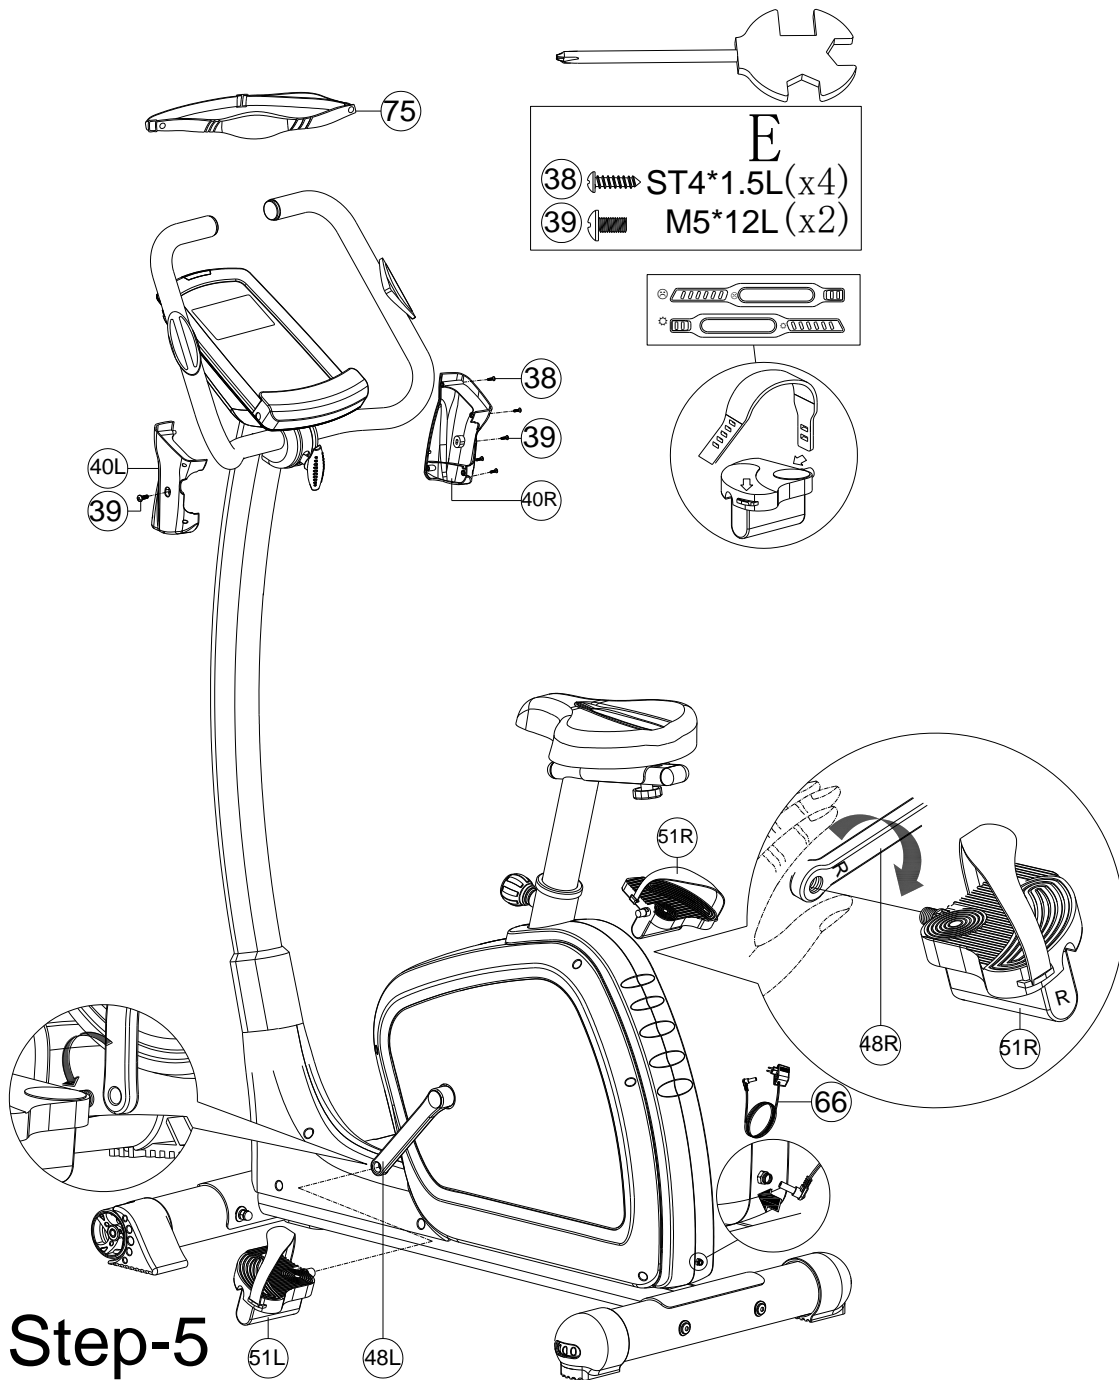

Step-5

- 1) Assemble the computer bracket (left & right) (40L&R) by screw (38) and bolt (39).
- 2) Assemble the pedal (51L&R) with crank (48L&R).
- 3) Plug the adaptor (66) and turn on the computer.

CONSOLE SM2570-31

DISPLAY FUNCTIONS

ITEM	DESCRIPTION
TIME	Workout time displayed during exercise, Range 0:00 ~ 99:59
SPEED	Workout speed displayed during exercise, Range 0.0 ~ 99.9
RPM	Rotation per minute, Range 0 ~ 999
DISTANCE	Workout distance displayed during exercise, Range 0.0 ~ 99.9
CALORIES	Burned calories during workout display, Range 0 ~ 999
PULSE	Pulse bpm displayed during exercise. Pulse alarm when over preset target pulse.
WATTS	Display current workout power. Range 0~999.
MANUAL	Manual mode workout.
BEGINNER	4 PROGRAM selection.
ADVANCE	4 PROGRAM selection.
SPORTY	4 PROGRAM selection.
CARDIO	Target HR training mode.
WATT	WATT constant training mode.


BUTTONS

ITEM	DESCRIPTION
Up	<ul style="list-style-type: none">• Increase resistance level• Setting selection.
Down	<ul style="list-style-type: none">• Decrease resistance level• Setting selection.
Mode / Enter	<ul style="list-style-type: none">• Confirm setting or selection.
Reset	<ul style="list-style-type: none">• Hold on pressing for 2 seconds, computer will reboot and start from user setting.• Reverse to main menu during presetting workout value or stop mode.
Start/ Stop	<ul style="list-style-type: none">• Start or Stop workout.
Recovery	<ul style="list-style-type: none">• Test heart rate recovery status.
Body fat	<ul style="list-style-type: none">• Test body fat% and BMI.

OPERATION






POWER ON

Plug in power supply, computer will power on and display all segments on LCD for 2 seconds.

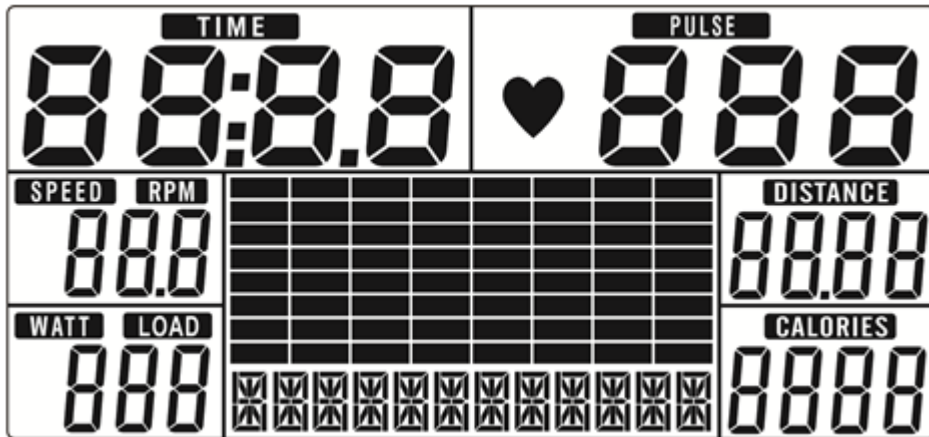

WORKOUT SELECTION

Pres UP or DOWN to select workout Manual → Beginner → Advance → Sporty → Cardio → Watt

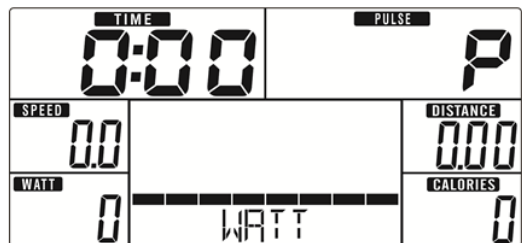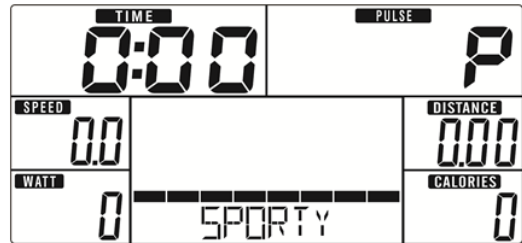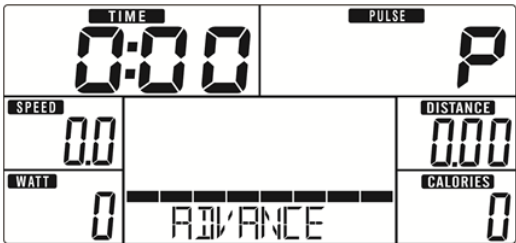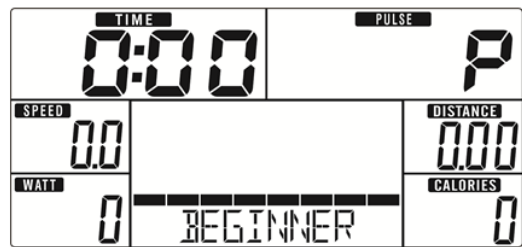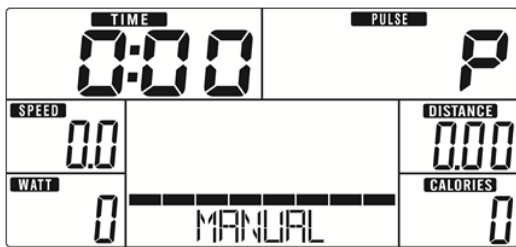

MANUAL MODE


Press START in main menu may start workout in manual mode.

1. Press UP or DOWN to select workout program, select Manual and press MODE / ENTER to enter.
2. Press UP or DOWN to set TIME, DISTANCE, CALORIES, PULSE and press MODE / ENTER to confirm.
3. Press START/STOP buttons to start workout. Use UP or DOWN to adjust load level. Load level display in WATT window, no adjusting for 3s, it will switch to display WATT.
4. Press START/STOP keys to pause workout. Press RESET to return to main menu.




BEGINNER MODE

1. Press UP or DOWN to select workout program, select Beginner mode and press MODE / ENTER to enter.
2. Press UP or DOWN to select Beginner program 1~4 and press MODE / ENTER to enter.
3. Press UP or DOWN to set TIME.
4. Press START/STOP button to start workout. Use UP or DOWN to adjust load level.
5. Press START/STOP button to pause workout. Use RESET to return to main menu.

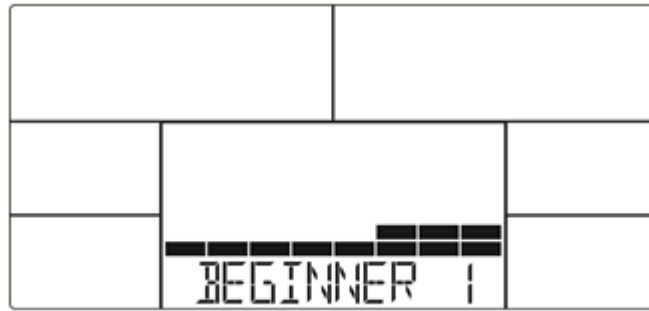


ADVANCE MODE

1. Press UP or DOWN to select workout program, select Advance mode and press MODE / ENTER to enter.
2. Press UP or DOWN to select Advance program 1~4 and press MODE / ENTER to enter.
3. Press UP or DOWN to set TIME.
4. Press START/STOP key to start workout. Use UP or DOWN to adjust load level.
5. Press START/STOP key to pause workout. Use RESET to return to main menu.

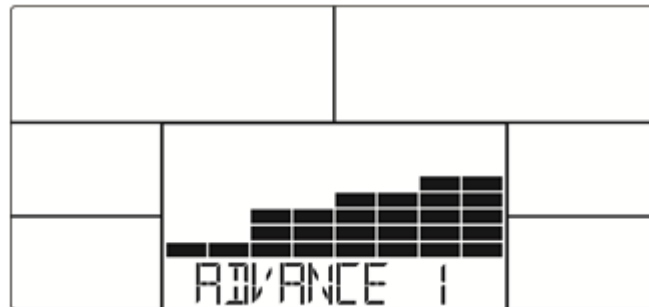

SPORTY MODE


1. Press UP or DOWN to select workout program, select Sporty mode and press MODE / ENTER to enter.
2. Press UP or DOWN to select Sporty program 1~4 and press MODE / ENTER to enter.
3. Press UP or DOWN to set TIME.
4. Press START/STOP key to start workout. Use UP or DOWN to adjust load level.
5. Press START/STOP key to pause workout. Use RESET to return to main menu.

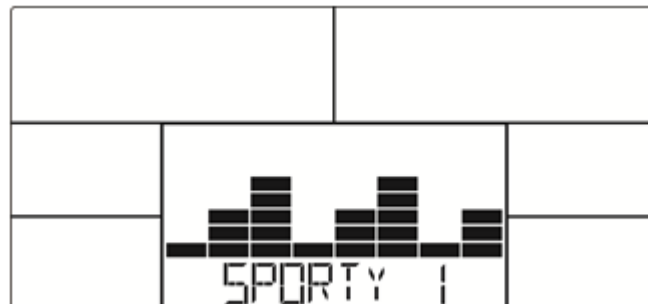

CARDIO MODE

1. Press UP or DOWN to select workout program, choose CARDIO and press MODE / ENTER to enter.

2. Press UP or DOWN to set Age.
3. Press UP or DOWN to select 55%, 75%, 90% or TAG (TARGET H.R.) (default: 100).
4. Press UP or DOWN to set workout TIME.
5. Press START/STOP key to start or stop workout. Use RESET to return to main menu.

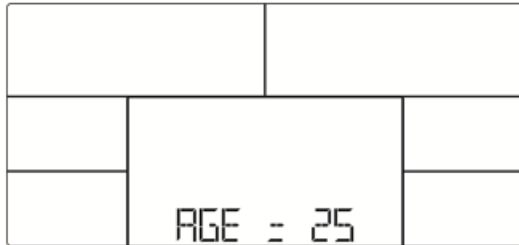

WATT MODE

1. Press UP or DOWN to select workout program, select WATT and press MODE / ENTER to enter.
2. Press UP or DOWN to set WATT target. (default: 120, Drawing 18)
3. Press UP or DOWN to set TIME.
4. Press START/STOP key to start workout. Use UP or DOWN to adjust Watt level.
5. Press START/STOP key to pause workout. Use RESET to return to main menu.



RECOVERY PROGRAM

After the exercise, you can start the heart rate recovery program by pressing the RECOVERY button. Grab the sensors on the handles or wear on the chest strap. The display will show a countdown from 00:60 to 00:00. The display will show the heart rate result after the exercise from F6 (best) to F6 (worst). Press RECOVERY to return to the main menu.




BODY FAT PROGRAM

Program for measuring body fat.

1. If no program is running, press BODY FAT.
2. Enter the data: GENDER, AGE, HEIGHT, WEIGHT.
3. You must hold both sensors on the handles during the measurement. The display will show "=" for 8 seconds.

4. The LCD display will show BODY FAT (body fat) in % and BMI for 30 seconds.
5. Error messages:
 - If the LCD display shows “= =”, it means that you have not grasped the sensors on the handles correctly or you have not connected the chest belt correctly.
 - If the display shows E-1, it means that no heart rate signal was detected.
 - If the display shows E-4, it means that the %fat is lower than 5% or the BMI is lower than 5 or higher than 50.

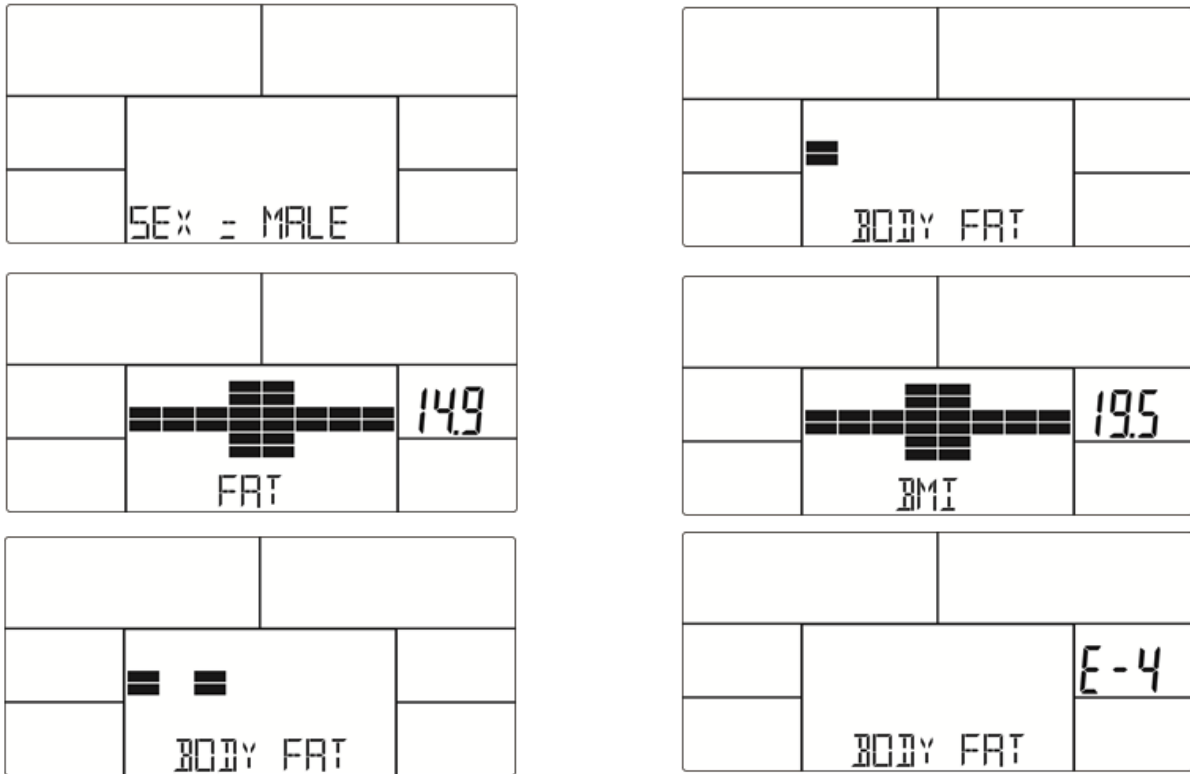

WARNING: this is for guidance only and is not for medical or health purposes.

iConsole+Training APP

Turn on Bluetooth on your smart device. Open the iConsole+ Training app and pair your smart device with your console.



NOTE:

- When you start the iConsole+ Training app on your smart device, your console will turn off.
- To turn on the console, turn off the iConsole+ Training app and your Bluetooth on your smart device.

USE

Exercise on the exercise bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the exercise bike it can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an exercise bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the exercise bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the exercise bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the exercise bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

CORRECT BODY POSTURE

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

MAINTENANCE

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.

- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.
- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

STORAGE

Keep the exercise bike in a clean and dry environment. Make sure the power switch is turned off and the exercise bike is not plugged into the power socket.

IMPORTANT NOTICE

- This exercise bike comes with standard safety regulations and is only suitable for home use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the exercise bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This exercise bike is not suitable as a professional or medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

