




USER MANUAL – EN

IN 26293 Treadmill inSPORTline Gardian G10

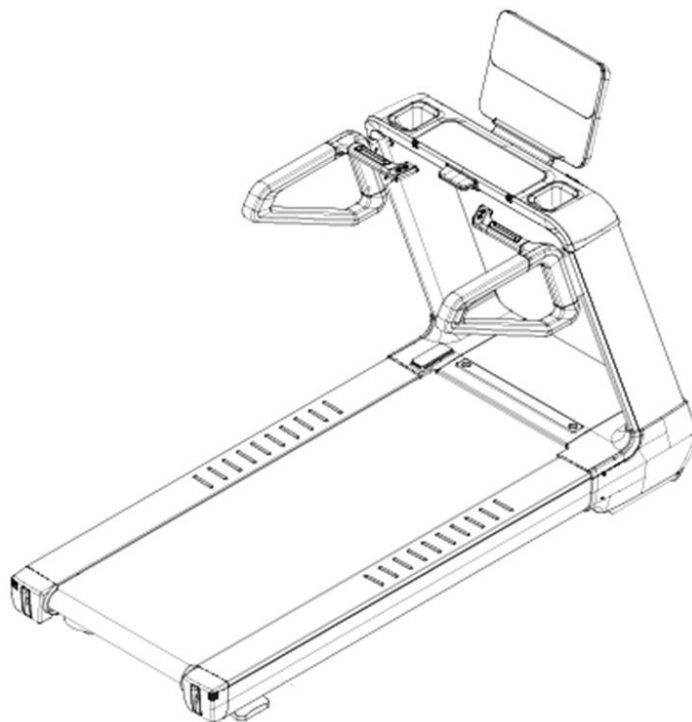

CONTENTS

SAFETY INSTRUCTIONS.....	3
ASSEMBLY	4
SPECIFICATIONS.....	9
CONSOLE	9
FUNCTION.....	9
BUTTONS	10
PROGRAMS.....	10
MAINTENANCE AND STORAGE	12
REGULAR INSPECTION.....	13
SAFE EXERCISING	13
GETTING START	13
WARM – UP EXERCISE	14
STORAGE	15
IMPORTANT NOTICE.....	15
ADJUSTING THE RUNNING BELT.....	15
LUBRICATING THE TREADMILL	16
PARTS LIST	17
ENVIRONMENT PROTECTION	19
DIAGRAM.....	20
ENVIRONMENT PROTECTION	21
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS	Chyba! Záložka není
definována.	

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS






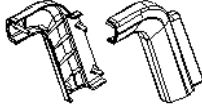








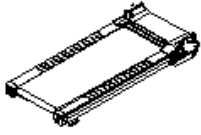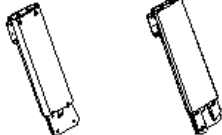






- Read the manual carefully and keep it for future reference.
- Always clip the safety key to your clothes or belt before starting exercising.
- Move naturally, forward. Do not look on your feet. Only for one person can use the product on the same time.
- Speed increase gradually, not instantly.
- In case of danger, press the stop button or pull out the safety key.
- Leave the device after it stopes moving.
- Follow the assembly instructions. Assembly can be done by adult person.
- Keep away from kids and pets. Do not leave kids and pets unattended near the treadmill. Treadmill is for adults only.
- Before starting any exercise, program ask your physician. It is important if you have heath issues or ongoing treatment or have high blood pressure.
- Regularly check all bolts and nuts. They must be tightened properly. Regularly check the treadmill for damage or signs of wear. Do not use damaged or wear treadmill.
- Regularly check the treadmill for signs of wear or damage. If any sharp edge appears stop using the treadmill.
- Please the treadmill on flat, dry and cleat surface. Keep safety distance of at least 0.6 m around the treadmill. Do not use in humid areas. Do not place the treadmill on thick carpet.
- If the power cable is damaged do not use the device. Buy new one in authorized shop.
- Protect the treadmill from humidity and water.
- Place the treadmill not to cover socket.
- Do not use aerosol sprays in the area around treadmill.
- If the treadmill is running, do not remove the protective cover. If you need to remove the protective cover during maintenance, unplug the treadmill from socket.
- Always wear sport clothes. Do not wear loose clothes that can get stuck. Always wear sport boots.
- Do not turn on the treadmill if you are standing on it. There is a delay when you turn on the treadmill. Before starting the treadmill stand on the side.
- Do not exercise 40 min after eating food.
- Always do warmups before exercise.
- Do not place foreign object to ventilation or sockets.
- Maintenance should be done only according to the manual, to prolong the lifespan.
- Do not modify the product.
- Exercise reasonably and do not overextend. If you exercise for the first time, hold your handles firmly until you get used to the device.
- In case of error or damage stop the exercising immediately. If the treadmill suddenly increases its speed, remove the safety key.
- Connect the treadmill to socket after the treadmill is assembled. Use only grounded socket.
- If you are not using the device unplug it from socket and safety key removed.

- Any part of the treadmill cannot prohibit the movement of the user.
- Do not use outdoors.
- Do not expose to direct sunlight.
- Do not place in areas with high humidity (pools, sauna etc.)
- Continuous use cannot be longer than 2 hours.
- If the treadmill is not in use, remove the safety key.
- **Operation temperature:** 5 – 40 °C
- **Max. user weight:** 180 kg
- **Category:** SB for commercial use

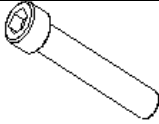SAFETY WARNING: Do not use heart rate sensors in the handle at speeds above 14 km / h.


WARNING! The heart rate monitoring system may not be accurate. Overextending during training can cause serious injury or death. If you feel nauseous, stop the exercise immediately!

ASSEMBLY

			
1. Main frame	3. L/R post	4. Main console frame	5. Console holder
			
7. L/R handle	36. L/R handle cover	40. L/R Side covers	68. Wrench #5
			
69. Wrench #6	70. Wrench #8	71. Wrench	72. Wrench 17-22
			
73. Wrench 34	89. Bolt M6x20	90. Bolt M8x25	94. Bolt M8x15
			
109. Bolt BT4.0x15L	141. Cable	160. End cap	162. Bolt M8x15
			
170. Console			


Step 1

Attach the posts (3 L/R) to the main frame (1) with M10x15 bolts (94). Connect the cables (138 and 139) on the left side. Connect the cables (138 and 134) on the right side.

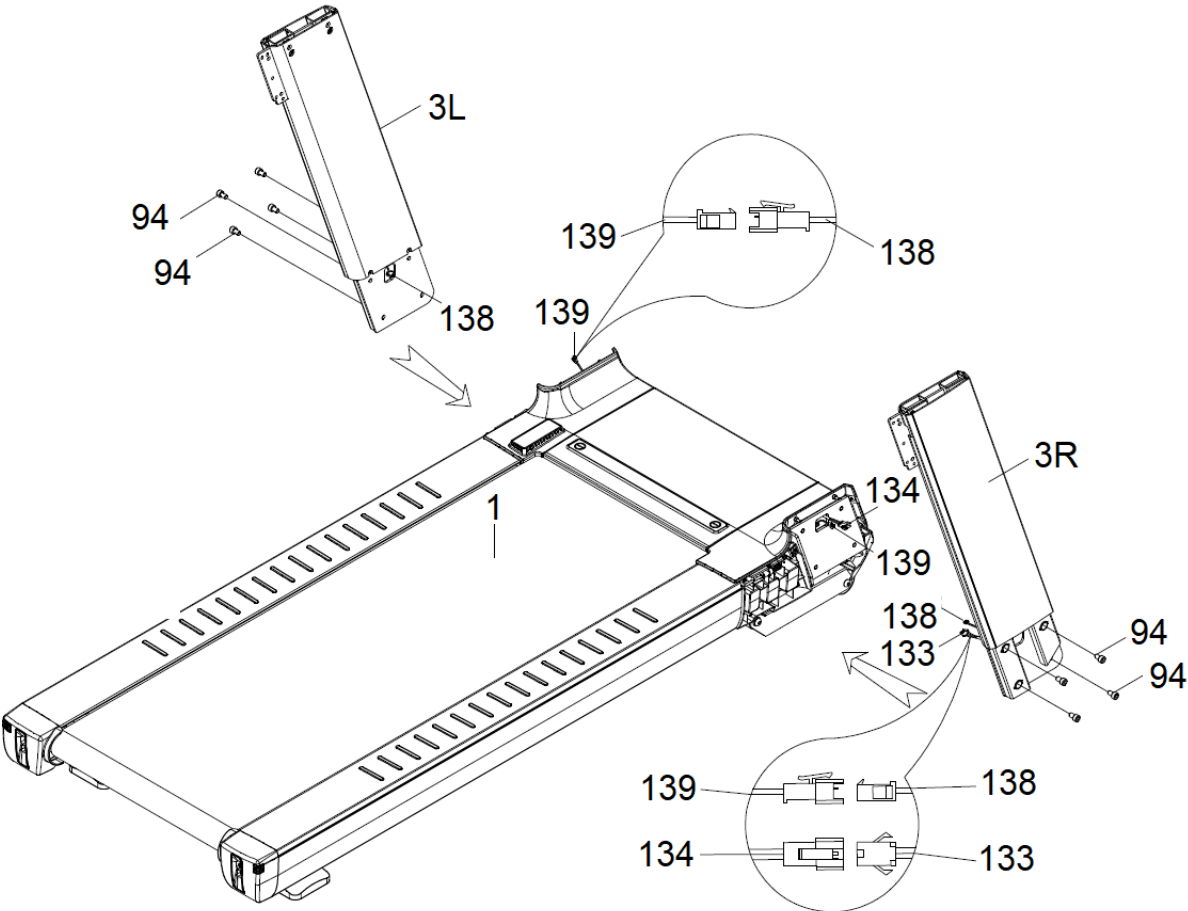


Step 2

Connect the cables leading from the posts (3 L/R) to the cables leading from the main console frame (4). Attach the main console frame (4) to the posts (3 L/R) with 4x M6x10 bolts (103), 4x M6x10 bolts (88) and then attach the end caps (160).

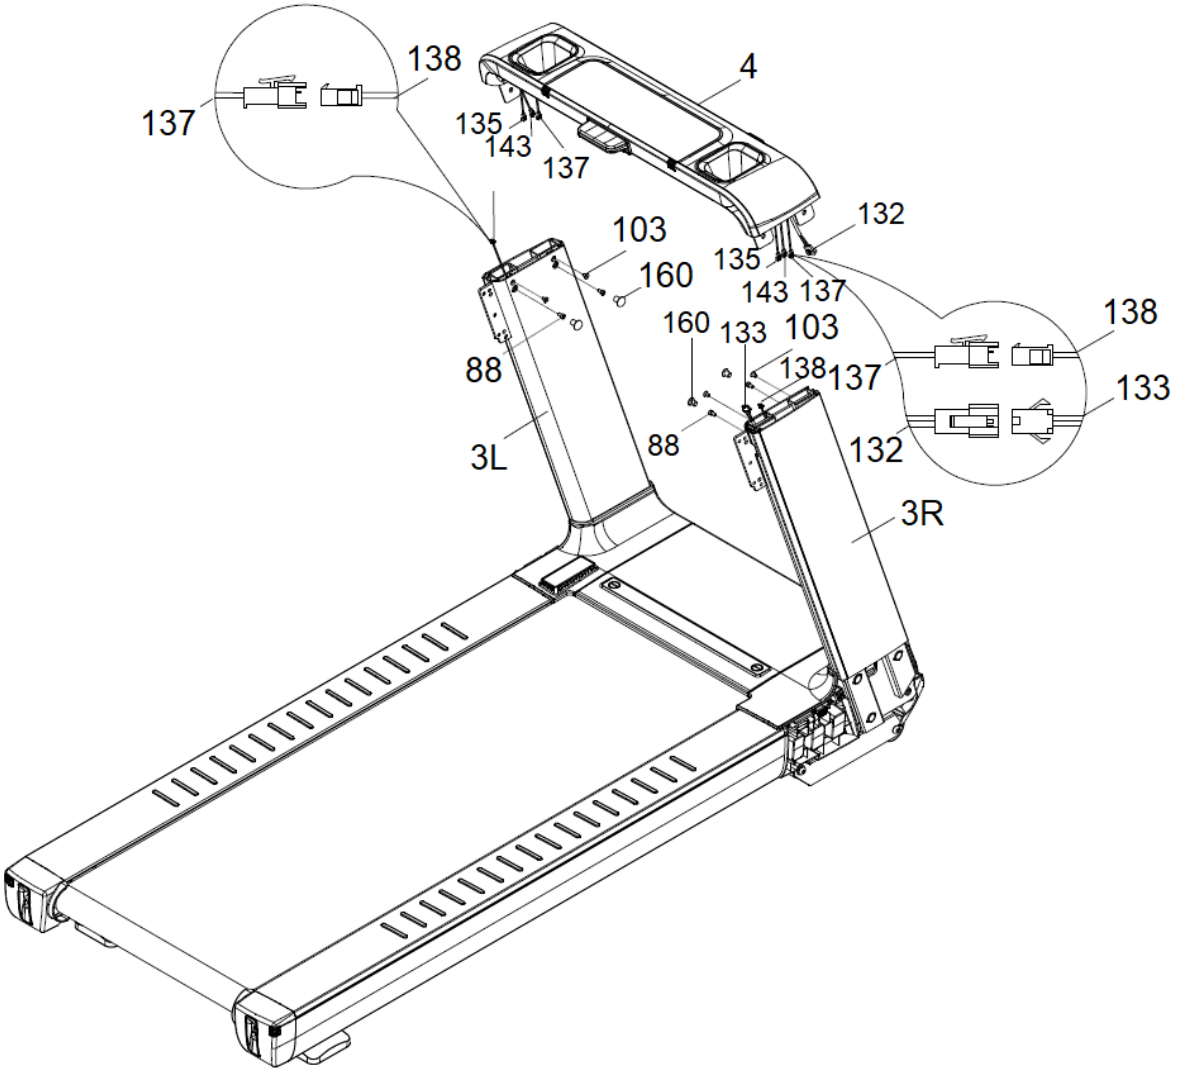


Step 3

Connect the cable (141) from the console holder (5) to the cable (140) leading from the main console holder (4). Attach the console holder (5) to the main console holder (4) using 4x M8x25 bolts (90). Pull the cables (135 and 143) out of the posts.

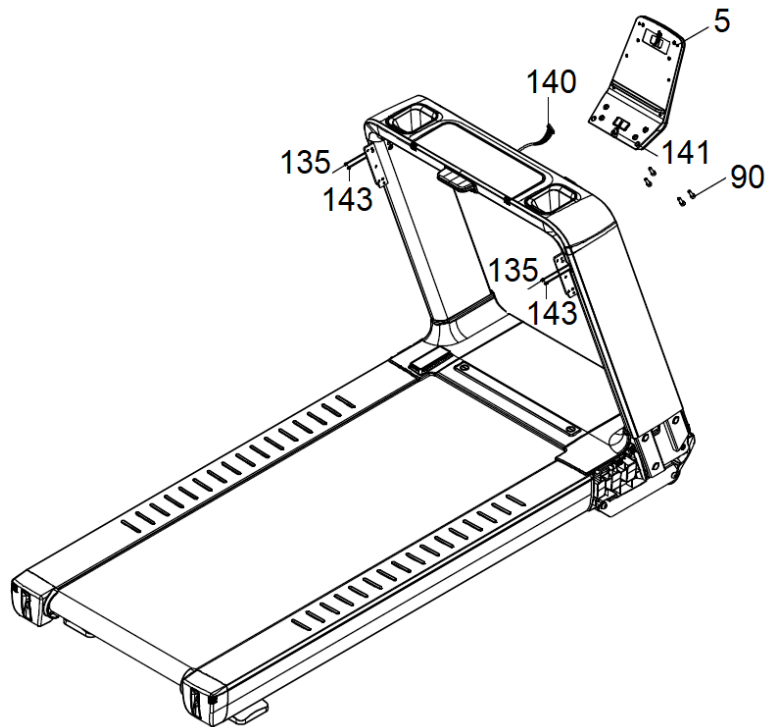


Step 4

Connect cable (142) from console (38) with cable (141) from console holder (5). Attach the console (38) to the console holder (5) using 4x M6x20 bolts (89).

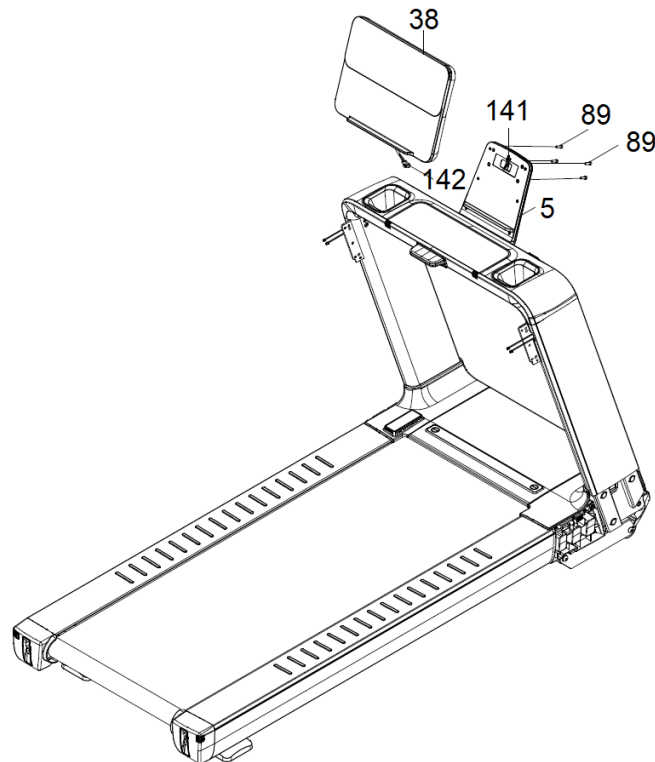


Step 5

Connect the cables (135 and 143) from the posts to the cables (136 and 144) from the handles (7). Fix the handles (7) to the posts using 5x M8x15 bolts (162). Then attach the covers (40) to the handles using BT4.0x15 screws (109).

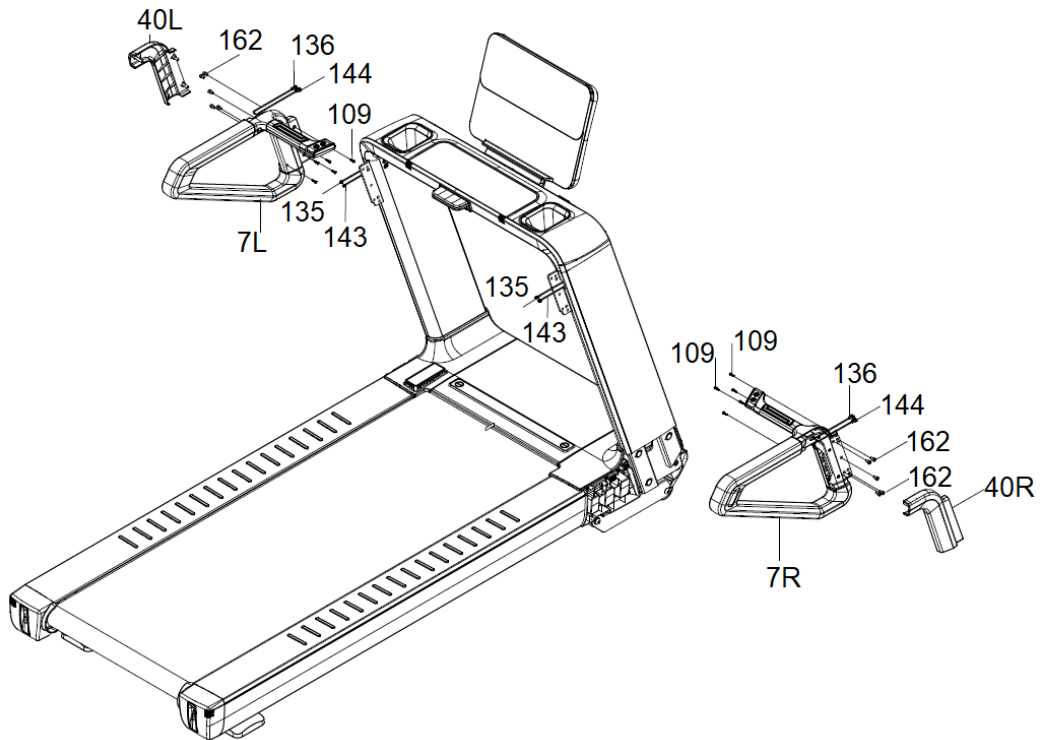


Step 6

Attach side covers (44) with BT 4.0x15 screws (109).

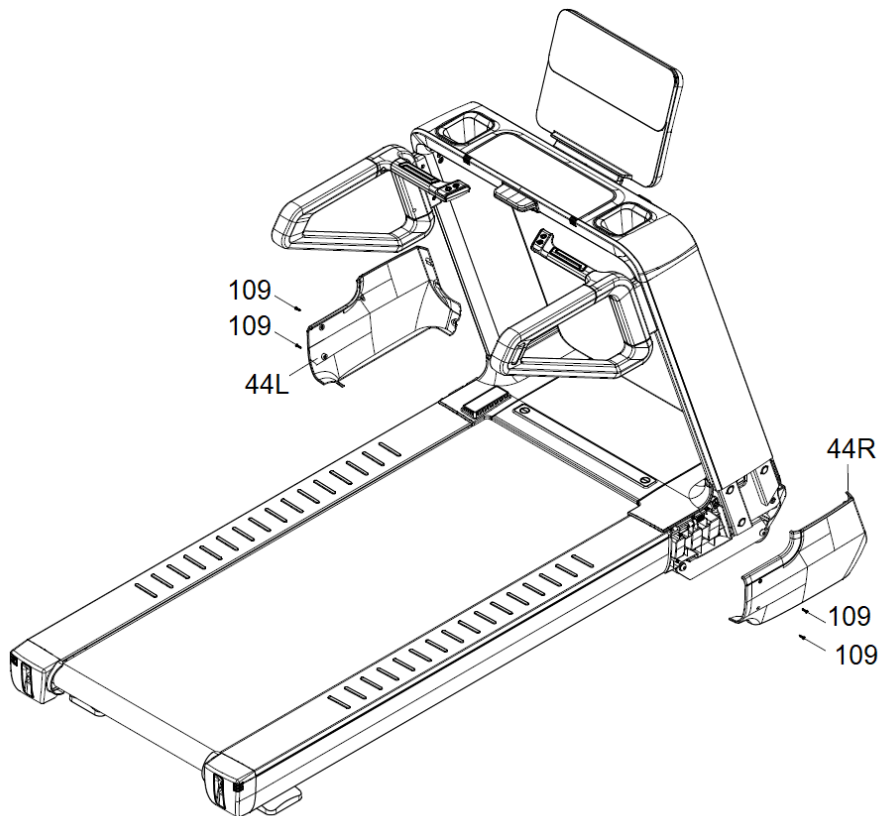

Step 7

Level the treadmill using the feet.

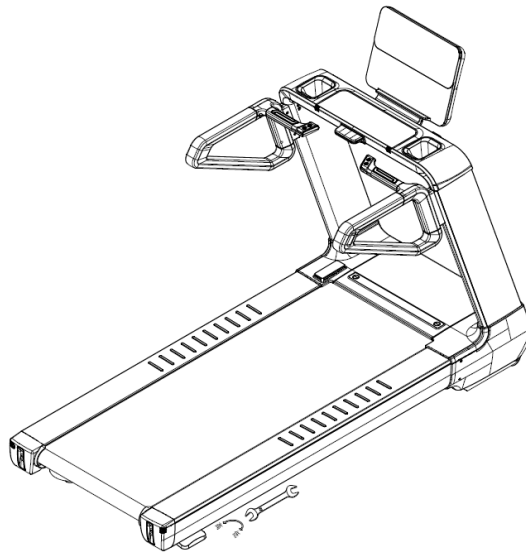

SPECIFICATIONS

Dimensions	2055x870x1500 mm	Speed	0,8 – 20 km/h
incline	0–18 %	Engine	6,0 HP (max)
Running surface (mm)	580 x 1600	Input	240V/50 Hz
Net weight	185 kg	Power	2200 W
Weight limit	180 kg	Operating temperature	0 – 28 °C
LED display	Incline, speed, time, distance, calories, pulse, number of steps		

CONSOLE

FUNCTION

Incline	0–18 %
Distance/steps	If the value exceeds the maximum, it will start to display from 0. If countdown is set, the value will count down from the set value to 0, then it will switch to standby mode. Distance: 0.00 - 99.99 Steps: 0 – 9999
Time	If the value exceeds the maximum, it will start to display from 0. If countdown is set, the value will count down from the set value to 0, then it will switch to standby mode. 0:00 - 99:59

Pulse/calories	If the value exceeds the maximum, it will start to display from 0. If countdown is set, the value will count down from the set value to 0, then it will switch to standby mode. Pulse: 22 – 250 Calories: 0 – 9999
Speed	0.8 – 20 km/h

BUTTONS

Start	Press to lower the running belt
Stop	During operation, press to stop the treadmill
Mode	You can select time, distance and calorie countdown
Program	Můžete vybrat jeden z 24 přednastavených programů P1 – P24, 2 uživatelské programy a 3 puls programy
Speed +	increase the speed (or other value) by 0.1
Speed --	decrease the speed (or other value) by 0.1
Incline +	increase the incline during use
Incline -	reduce the incline during use
Speed 3, 6, 9	Quick speed selection
Incline 3, 6, 9	Quick incline selection

PROGRAMS

Manual program

After connecting and starting the treadmill, the treadmill switches to standby mode after 2 seconds. Press START to start the belt, the speed will be at the lowest value, all data will be added. You can change the speed and incline using the Speed and Incline buttons.

Deduction programs

Time countdown: In standby mode, press the MODE button 1x. The TIME display will flash, the default value is 30. Use the SPEED +/- buttons to adjust the value by 1 in the range 5:00 – 99:00. Press START to start the set countdown, as soon as the value reaches 0, the treadmill will stop. Speed and incline can be adjusted during use.

Distance Countdown: In standby mode, press the MODE button 2x. The DISTANCE display will flash, the default value is 5.00. Use the SPEED +/- buttons to adjust the value by 0.1 in the range 0.50 - 99.00. Press START to start the set countdown, as soon as the value reaches 0, the treadmill will stop. Speed and incline can be adjusted during use.

Calories Countdown: In standby mode, press the MODE button 3x. The CALORIE display will flash, the default value is 100. Use the SPEED +/- buttons to adjust the value by 10 in the range 20-990. Press START to start the set countdown, as soon as the value reaches 0, the treadmill will stop. Speed and incline can be adjusted during use.

Preset programs

In standby mode, press the PROGRAM button to select program P1 to P24. The default value of the time is 30:00, you can use the SPEED +/- buttons to adjust the value. Once the time reaches 0, the treadmill stops.

Prog	Times	SETTING TIME 30 Minutes/ 10 = EVERY GARDE TIME									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	1	1	4	3	4	3	5	4	2	5
	INCLINE	1	1	2	3	3	1	2	2	3	2
P2	SPEED	2	5	4	6	4	6	4	2	5	2
	INCLINE	1	2	3	3	2	2	3	5	2	2
P3	SPEED	2	5	4	5	4	5	4	4	3	2
	INCLINE	1	2	2	3	1	2	2	2	2	1
P4	SPEED	3	6	7	5	8	5	9	6	4	3
	INCLINE	2	2	3	3	2	2	4	6	2	2
P5	SPEED	3	6	7	5	8	6	7	6	4	3
	INCLINE	1	2	4	3	2	2	4	5	2	1
P6	SPEED	2	8	6	4	5	9	7	5	4	3
	INCLINE	2	2	6	2	3	4	2	2	2	1
P7	SPEED	2	6	7	4	4	7	4	2	6	2
	INCLINE	4	5	6	6	9	9	10	10	6	3
P8	SPEED	2	4	6	8	7	8	6	2	3	2
	INCLINE	3	5	4	4	3	4	4	3	3	2
P9	SPEED	2	4	5	5	6	5	6	3	3	2
	INCLINE	3	5	3	4	2	3	4	2	3	2
P10	SPEED	2	3	5	3	3	5	3	6	3	3
	INCLINE	4	4	3	5	6	7	7	5	3	3
P11	SPEED	3	5	8	8	9	5	7	6	3	2
	INCLINE	4	5	6	6	9	9	10	10	6	3
P12	SPEED	3	5	5	4	4	6	4	2	3	4
	INCLINE	3	5	6	7	10	10	10	10	6	3
P13	SPEED	3	5	7	8	9	10	8	5	4	4
	INCLINE	1	2	3	4	5	5	4	3	2	1
P14	SPEED	2	4	6	8	10	10	8	6	4	2
	INCLINE	4	5	6	7	8	8	7	6	5	4
P15	SPEED	3	4	7	8	10	9	8	6	5	4
	INCLINE	3	4	5	6	7	8	8	5	3	2
P16	SPEED	2	3	5	4	5	5	7	5	4	2
	INCLINE	0	2	2	4	4	6	6	1	1	0
P17	SPEED	2	6	8	3	9	4	10	4	3	2
	INCLINE	6	6	10	10	3	3	3	7	1	0
P18	SPEED	1	5	4	5	9	5	4	5	3	2
	INCLINE	5	5	8	8	10	10	10	7	1	0
P19	SPEED	3	4	8	4	3	8	6	4	4	1
	INCLINE	2	4	4	4	4	2	3	3	1	0
P20	SPEED	3	2	3	6	6	6	6	5	2	2
	INCLINE	3	3	5	5	5	5	2	2	1	0
P21	SPEED	2	6	5	6	8	6	7	4	3	2
	INCLINE	2	3	3	3	4	4	1	1	2	0
P22	SPEED	2	4	6	8	10	8	6	4	6	6
	INCLINE	2	3	6	6	3	5	9	3	5	3
P23	SPEED	2	4	6	8	4	2	7	8	10	1
	INCLINE	3	6	5	3	5	3	5	5	4	2
P24	SPEED	2	4	6	4	6	8	10	8	6	4
	INCLINE	2	5	5	3	5	5	3	3	4	2

User programs

Users can prepare their own U1 and U2 programs. The default time is 30:00, you can adjust the value using the SPEED +/- buttons. Press MODE to confirm the time, then set the speed with the SPEED +/- buttons and the incline with the INCLINE +/- buttons. Press MODE to confirm the value and move to the next segment. After that, a time countdown starts and when 0 is reached, the program stops.

Pulse program

In standby mode, press the PROGRAM button to select HRC1, HRC2, HRC3, the default time is 30:00, you can adjust the value using the SPEED +/- buttons. Press MODE to confirm the time and move to the age setting (AGE). After setting the age, the program starts. When 0 is reached, the program stops.

The pulse program checks the pulse value every 15 seconds. If the detected pulse is lower than the target value, the incline or speed is increased, it changes in the cycle. If the pulse is higher than the target value, the incline or speed is reduced, it changes in the cycle. Values vary speed 0.2 / tilt 1

Heart rate targets:

HRC1 – $(220 - \text{age}) \times 0,65$

HRC2 – $(220 - \text{age}) \times 0,75$

HRC3 – $(220 - \text{age}) \times 0,85$

Pulse detection test

Hold the pulse detection plates for 5 seconds, the readings should be shown on the PULSE display.

Standby Mode

The treadmill switches to standby mode after 4 minutes of inactivity to save energy. Press any button to wake up the system.

Setting the unit of measurement and centering the incline

Press START, remove and place in the safety key. The SPEED display shows the (SI – metric, ENG – imperial) unit display system. Use the SPEED +/- buttons to select your preferred unit.

If you press the SPEED +/- and INCLINE +/- buttons at the same time in standby mode, the treadmill will automatically center the incline.

Chest strap

For uncoded analog 5kHz signal

We recommend Sigma 5kHz (range 1 meter, with the possibility of changing the battery) or Polar T34 (range 4 m, without the possibility of changing the battery)

MAINTENANCE AND STORAGE

STORAGE

Store the treadmill in a dry and dark place. Protect from dust. Unplug from the wall outlet (if applicable) before storing.

The durability and safety of the device can only be guaranteed if the product is regularly checked for damage or wear.

Never remove protective covers.

The belt is for indoor use only, do not use in damp areas.

Check all bolts and nuts regularly for tightness.

MAINTENANCE

Always use a soft, cotton cloth and a non-aggressive detergent for cleaning.

Never use aggressive cleaning agents based on alcohol or petrol.

REGULAR INSPECTION

DAILY

- Before each use, make sure that no object in the area prevents the user from moving freely.
- Before each use, check that the belt edges are properly locked and check for wear.
- After each use, wipe away sweat and moisture.
- Clean the console display with a damp, soft cotton cloth. Avoid using too much water.

WEEKLY

- Clean the plastic cover properly.
- Clean handles and display
- Check that the edges are securely locked.
- Check all screws, nuts for wear and tightness.

MONTHLY

- Lubricate all metal ends with corrosion protection.
- Check the AA battery level in the console, replace if necessary.
- Clean the running surface.

We do not recommend performing any internal corrections / adjustments.

The use of any means other than cleanser and lubricant may reduce the product life.

SAFE EXERCISING

Please consult your doctor before starting any exercise program. They can recommend the frequency, intensity and duration of the exercise based on your age and health condition. If you feel any or similar symptoms during exercising – pain or tightness on the chest, irregular heart rate, shortness of breath, dizziness or other discomfort - please stop immediately! Consult your doctor before you continue exercising. If you use the treadmill often, you can choose regular walking speed or jogging speed. If you have no experience or aren't sure what the best initial speed for you is, refer to the data below:

Speed 1 - 3.0 km/h	people with weak constitution
Speed 3.0 - 4.5 km/h	people who do not exercise often
Speed 4.5 - 6.0 km/h	normal walking speed
Speed 6.0 - 7.5 km/h	fast walking
Speed 7.5 - 9.0 km /h	jogging
Speed 9.0 - 12.0 km/h	intermediate speed runner
Speed 12.0 - 14.5 km/h	experienced runner
Speed over 14.5 km/h	excellent runner

ATTENTION:

- Users who want to exercise while walking should choose 6 km/h speed or lower.
- Users who want to exercise while running should choose 8 km/h speed or higher.

GETTING START

PREPARATION

If you are more than 45 years old or have health problems and this is your first time using a treadmill, please consult your doctor before exercising.

Before you use the motorized treadmill, please stand aside and learn how to use it, e.g. how to start, stop and adjust the speed. You can use it after you familiarize yourself with its functions.

EXERCISE

Stand aside to learn how to operate the machine (adjusting the speed and inclination). Start exercising after you familiarize yourself with the functions. Walk 1 km in a constant tempo and record the time it takes, which may be about 15 - 25 minutes. Walk 1 km by 4.8 km/h (you need about 12 minutes). After successfully completing this exercise a few times you can adjust to a higher speed and inclination. Have a good 30-minute exercise. When you do walking exercises do not rush. The exercise improves your health.

FREQUENCY

The optimal exercise frequency is 3 - 5 times per week for 15 – 60 min. It is better to make a schedule first and not exercise randomly. You can control the intensity of the movement through adjusting the speed and inclination. We suggest not to set the inclination when at the start of the exercise. When you want to increase the intensity of the exercise, change in inclination will be the most effective.

HOW TO EXERCISE

It is best for each exercise to last 15 – 20 min. Warm up for 2 minutes by walking 4.8 km/h, then increase the speed to 5.3 km/h, and then 5.8 km/h. Each section should take about 2 minutes. Then add 0.3 km/h per 2 mins, until your breathing quickens (You should have no difficulty though). Keep exercising at this speed. If you feel it is hard to breathe, lower the speed by 0.3 km/h. Finally, leave 4 minutes to reduce the speed at last. If you find increasing the intensity by increasing speed too hard, you can slowly increase the inclination. Just a small adjustment can increase the intensity greatly.

BURNING CALORIES - This way allows you to burn calories. Warm up for 5 minutes at 4 – 4.8 km/h speed, then add 0.3 km/h per every 2 minutes. Keep increasing the speed until you feel it is a challenge to do the exercise continually for 45 minutes. In order to increase intensity, you can try to exercise for 1 hour at this speed. You can exercise while watching TV. Add 0.3 km/h speed every time you see advertisements and return to the former speed by the end of the advertisement so that you increase the intensity only during advertisements. Slow down for at least 4 minutes.

CLOTHING

All you need is a pair of shoes, which let you stretch your feet fully and at the same time don't stick to foreign matters under your shoe's soles, so that you do not carry dirt onto the running belt and running board. The dirt and other foreign matter could damage them both. You should wear comfortable clothes.

WARM – UP EXERCISE

It is better to do some warm-up exercises before running. Warmed muscles are easy to stretch, so take the time to do 5 – 10-minute warm-up. Repeat each exercise shown in the pictures below.



Touch toes

Bend your knees slightly and slowly stretch your body downwards.

Relax your back and shoulders. Try to touch the toes. Keep the position for 10 - 15 seconds. Repeat approx. 3 times.

Hamstring stretches



Sitting on a cushion, stretch one leg straight and fold the other inward. Pull it as close to your body as you can. Try your best to touch the toes and keep the stretch for 10 – 15 seconds. Repeat 3 times for each leg.



Calves and Achilles tendon stretches

Support yourself with two hands on a wall or a tree with one leg stretched behind you. Keep the leg straight and the heel on the ground. Keep the position for 10 - 15 seconds. Repeat 3 times for each leg.

Quadriceps stretches

Support yourself with your right hand on the wall or a table and stretch your left hand backwards to hold your ankle. Pull it towards your buttocks until you feel tension in your thigh. Keep the position for 10 - 15 seconds. Repeat 3 times for each leg.

Inner thigh stretches

Sit down with your soles touching and knees outward. Pull your feet towards your groin. Keep the position for 10 - 15 seconds. Repeat 3 times.

STORAGE

Keep the treadmill in a clean and dry environment. Make sure the power switch is turned off and the treadmill is not plugged into the power socket.


IMPORTANT NOTICE

- This treadmill comes with standard safety regulations and is suitable professional and commercial use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the treadmill. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This treadmill is not suitable for medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.


ADJUSTING THE RUNNING BELT

Place the treadmill on level ground and set it at 3.5 – 5 km/h to check and see if the running belt (20) drifts from the center.



If the running belt (20) drifts to the right, turn the adjusting bolt on the right side $\frac{1}{4}$ turn clockwise, then turn the left adjustment bolt $\frac{1}{4}$ turn counter-clockwise. If the belt does not move, repeat this step until it centers. Refer to image A.

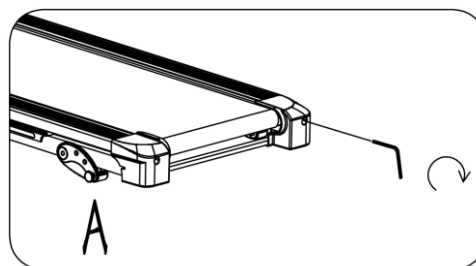

If the running belt (20) drifts to the left, turn the adjusting bolt on the left side $\frac{1}{4}$ of a turn clockwise, then turn the right adjustment bolt $\frac{1}{4}$ turn counter-clockwise. If the belt does not move, repeat this step until it centers. Refer to image B.

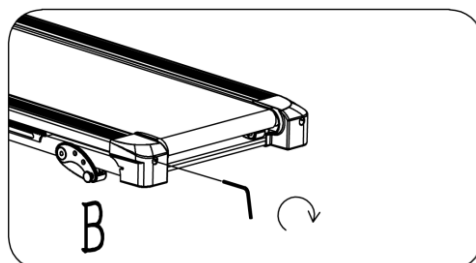

Over time, the running belt (20) will loosen. To tighten the belt, turn both the left & right-side adjustment bolts one full turn clockwise. Check the tension of the belt. Continue this process until belt is at the correct tension. Make sure to adjust both sides equally to ensure even belt alignment. Refer to image C.

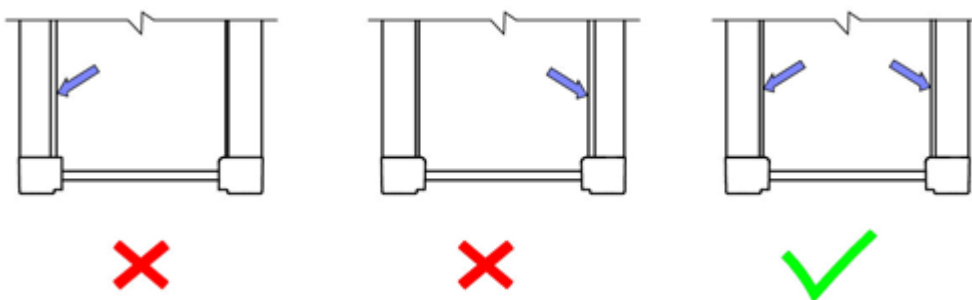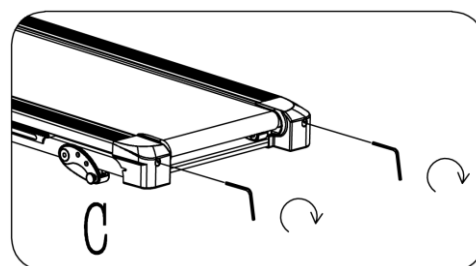

LUBRICATING THE TREADMILL

Lubricating the running belt & the running board is essential as the friction affects the life span and operations of the treadmill. Therefore, we suggest you to inspect the running belt regularly.

WARNING: Always unplug the treadmill from the electrical outlet before cleaning, lubricating, or repairing the unit.

We recommend following the lubrication chart below:


Light user (less than 3 hours/week)	Every 6 months
Medium user (3 - 5 hours/week)	Every 3 months
Heavy user (more than 5 hours/week)	Every 2 months

How to lubricate the treadmill:

Open the cover for the oil application hole.

Pour oil into the hole on the left rear side.

Close the oil opening and lower the belt to evenly apply the oil.

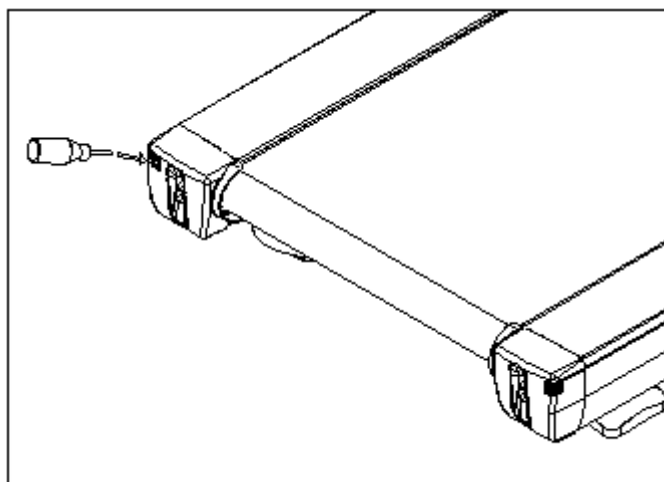

PARTS LIST

No.	Name	Qty	No.	Name	Qty
1	Main frame	1	86	Nut M10	10
2	Incline frame	1	87	Bolt M8x10	45
3	L/R post	2	88	Bolt M6x10	8
4	Main console holder	1	89	Bolt M6x20	4
5	Console holder	1	90	Bolt M8x25	4
6	Fuse	2	91	Bolt M8x65	1
7	L/R handle	2	92	Bolt M8x70x45	2
8	Fixing the engine cover	1	93	Bolt M8x45	1
9	Engine connection cover	2	94	Bolt M10x15	8
10	Tread lock	1	95	Nut M6	1
11	Reinforcing engine cover	1	96	Screw ST4.0x12	7
12	Engine cover bracket	2	97	Bolt BT 4.0x15	8
13	Switch plate	1	98	Bolt M5x12	7
14	Safety fuse plate	1	99	Bolt M8x25x15	2
15	Fastening the safety lock	1	100	Bolt M8x70x20	2
16	Fixing the side rail	2	101	Bolt M10x12	6
17	Side steps	2	102	Bolt M10x55x20	2
18	Console rear cover	1	103	Bolt M6x10	4
19	Console ground cable	1	104	Bolt M10x35	6
20	Engine cover pin	2	105	Bolt M10x45	2
21	Engine brake cover pin	2	106	Screw BT 3.0x8	34
22	Back cover	2	107	Screw BT 3.0x12	37
23	Left top cover	1	108	Bolt BT4.0x12	5
24	Right top cover	1	109	Screw BT 4.0x15	79
25	Connecting axis of tread	2	110	Pin ø6x12	2

26	Bearing nut	2	111	Bolt M4*10	10
27	Security key axis	1	112	Bolt M4*12	14
28	Fixing the speaker	2	113	Spring washer $\varnothing 10.2 \times \varnothing 18.8 \times t3$	4
29	Oval pressure plates	1	114	Washer $\varnothing 5.1 \times \varnothing 10 \times t1.0$	26
30	UPS power supply holder	1	115	Washer $\varnothing 6.6 \times \varnothing 11.8 \times t1.6$	1
31	Running board	1	116	Washer $\varnothing 11 \times \varnothing 20 \times t2.0$	12
32	Running belt	1	117	Washer $\varnothing 9 \times \varnothing 16 \times t1.6$	4
33	Drive belt	1	118	Signal cable 150 mm	3
34	Console top cover	1	119	Signal cable 300 mm	2
35	Console bottom cover	1	120	Grounding cable 300 mm	2
36	Console bottom cover	1	121	Grounding cable 200 mm	1
37	Console bracket cover	1	122	Electric reactor	1
38	Console display	1	123	Power cable	1
39	Front console keel	1	124	Plug	1
40	L/R outer handrail cover	2	125	Switch	1
41	L/R inner handrail cover	2	126	Overvoltage protection	1
42	L/R top cover	2	127	AC motor	1
43	L/R bottom cover	2	128	Tilt motor	1
44	Upper side covers	2	129	Filter	1
45	L/R inner side cover	2	130	Mp3 cable	1
46	Rear engine cover	1	131	Console motherboard	1
47	Engine top cover	1	132	Signal cable 400 mm	1
48	L/R Lining	2	132	Upper signal cable 400 mm	1
49	L/R Back cover	2	133	Signal cable 1200mm	1
50	L/R Lower Console Cover	2	134	Lower signal cable 550 mm	1
51	Buckle	2	135	Upper signal cable 500 mm	1
52	Pulse detection plates	4	136	Lower signal cable 450 mm	1
53	Transport wheels	2	137	Light upper cable 450 mm	2
54	Anti-slip mat	32	138	Light middle cable 1200 mm	2
55	Cable cover	5	139	Light bottom cable 350 mm	2
56	Washer	2	140	Upper console cable 200 mm	1
57	Screw cap	4	141	Console center cable 400mm	1
58	Non-slip feet pad	16	142	Bottom console cable 200 mm	1
59	Leveling feet	2	143	Upper pulse cable 550/750 mm	1
60	Silicone holder	3	144	Bottom pulse cable 350 mm	2
61	Silicone case cover	2	145	Speaker	2
62	Cable cover	1	146	Security key light	1
63	Security key	1	147	Small micro switch	1

64	Seal	8	148	Micro switch	1
65	Acrylic plate	1	149	Console adapter	1
66	Brush	1	150	Mp3 USB disk	1
67	Silicone	1	151	Incline button	1
68	Wrench #5	1	152	Speed button	1
69	Wrench #6	1	153	Inverter	1
70	Wrench #8	1	154	Sidebar	2
71	Wrench #13, #14, #17	1	155	Button sticker	1
72	Wrench 17-22	1	156	Console power supply	1
73	Wrench 34	1	157	Power cord	1
74	Front cylinder	1	158	Safety lock clip	1
75	Rear cylinder	1	159	Strapping tape	1
76	Cylinder	1	160	Pin	4
77	Springs $\varnothing 0.6 \times \varnothing 5.8 \times 20.6L$	1	161	Bolt M8*15	16
78	Springs $\varnothing 1.0 \times \varnothing 6.5 \times 29L$	2	162	Bolt M6	4
79	Spring $\varnothing 5 \times \varnothing 30 \times 43L \times 4.5$	4	163	Bolt M12x55	2
80	Spring $\varnothing 1.6 \times 21 \times 32L \times 5.5$	2	164	Bolt M12	2
81	Screw M10x45x15 mm	1	165	Washer $\varnothing 13 \times \varnothing 24 \times t2.5$	2
82	Screw M10x70x15 mm	1	166	Left-hand tightening washer	1
83	M6x8 screw	2	167	Right tension washer	1
84	M6x35 screw	1	168	Handrail washers	2
85	Nut M8	8	169	Console buttons	1
			170	Display motherboard	1


ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

DIAGRAM

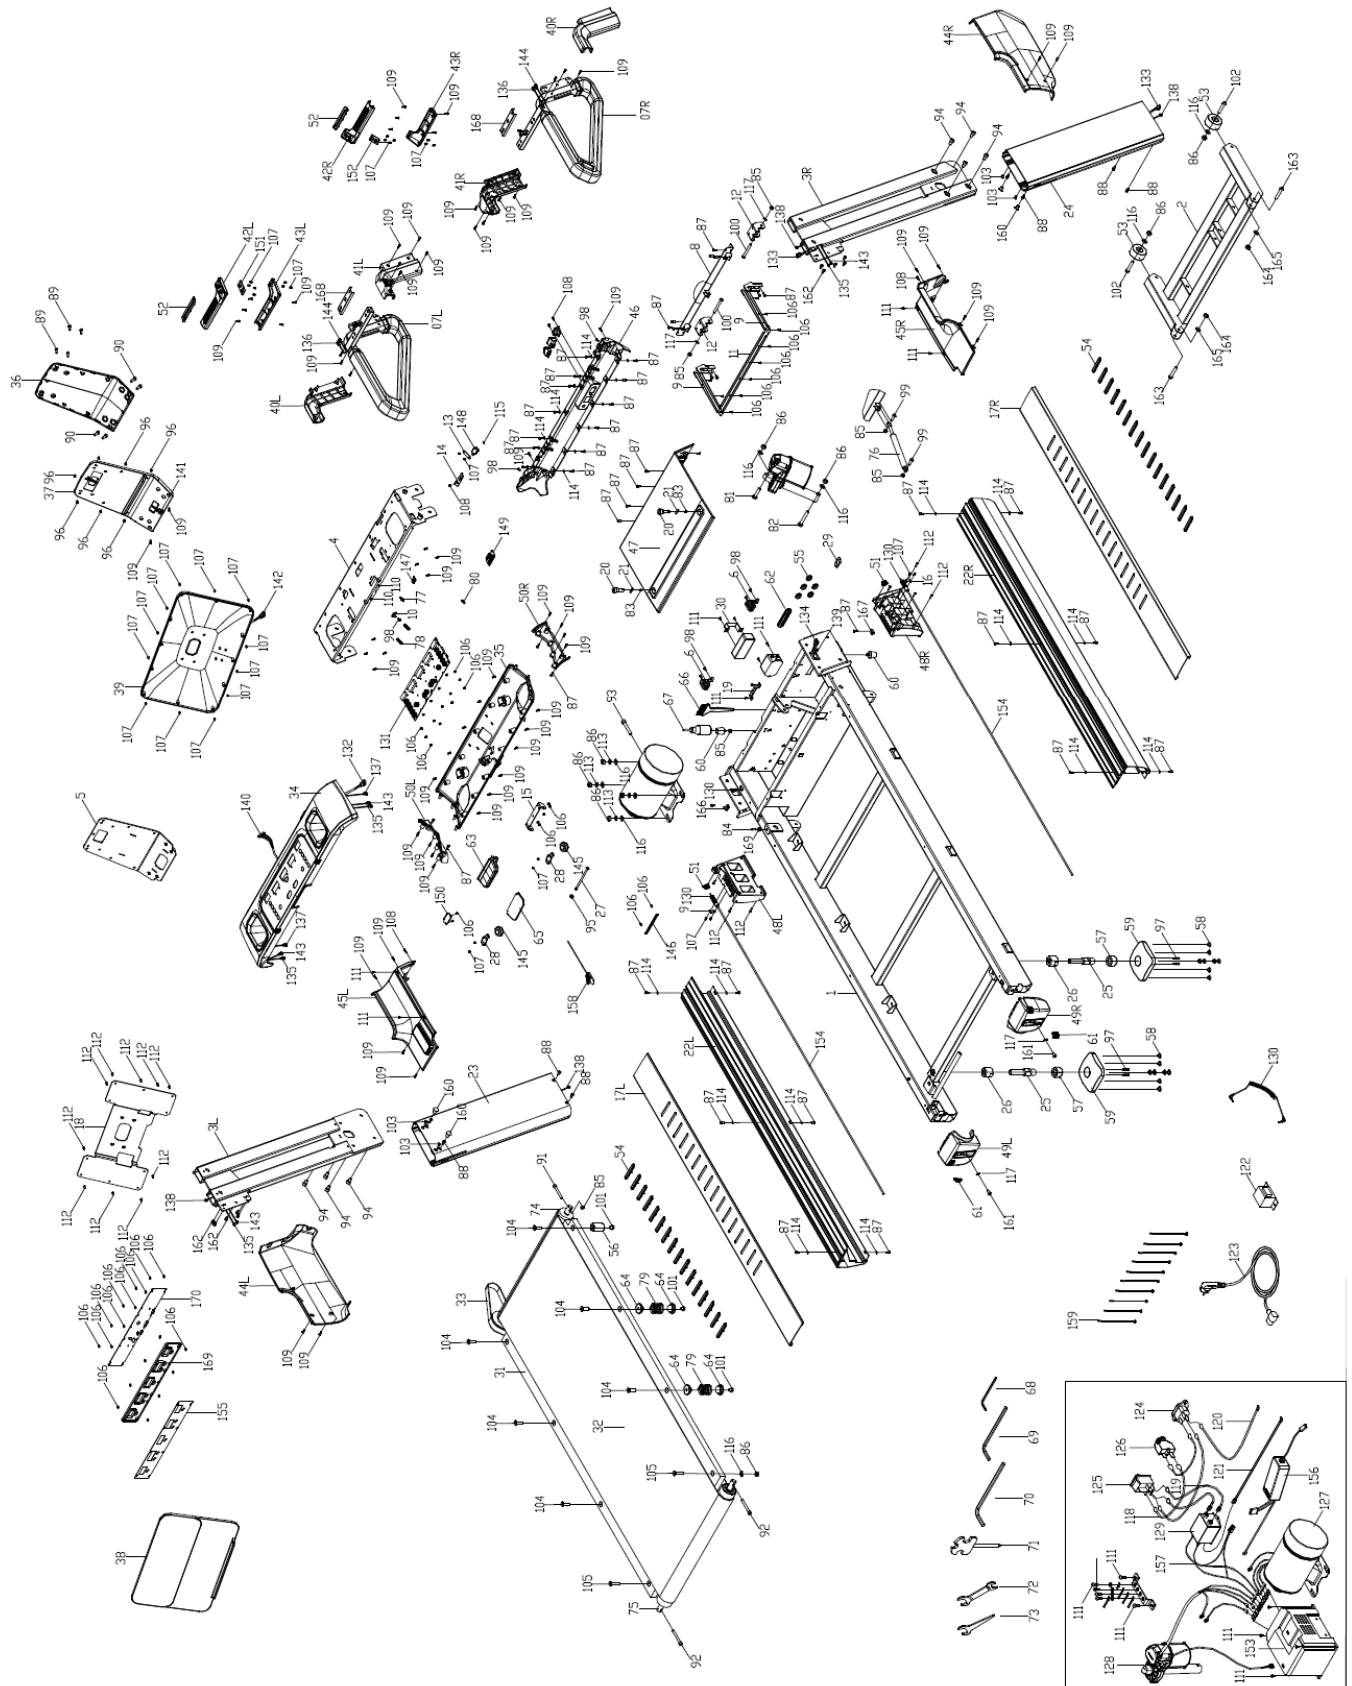

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729

Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

